



STACK ME UP BOOKCASE – ASYMMETRICAL

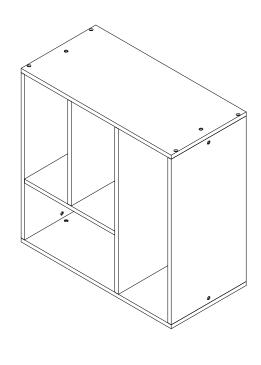

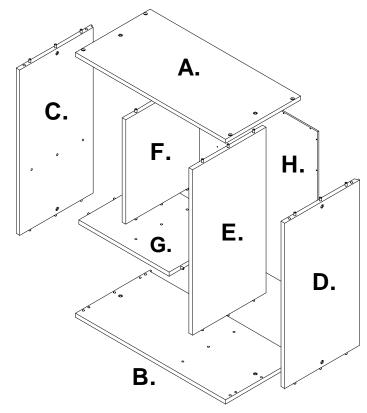

PARTS INCLUDED:

- (A) Top Panel 1pc
- (B) Bottom Panel 1pc
- (C) Left Panel 1pc
- (D) Right Panel 1pc
- (E) Long Divider 1pc
- (F) Short Divider 1pc
- (G) Short Shelf 1pc
- (H) Back Panel 1pc

TOOLS REQUIRED:

Philips Screwdriver (Not included)




(I) Allen Key – 1x	(J) Long Bolt 1/4"x25mm - 10x	(K) Short Bolt 1/4"x9mm – 6x
(L) Spring Washer 1/4" – 8x	(M) Flat Washer 1/4" – 8x	(N) End Cap – 8x
(O) Wood Screw 3.5x15mm - 31x		

PRE-ASSEMBLY:

- For your safety and ease, assembly by two adults is recommended.
- Please read all instructions before beginning assembly. The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- Remove all parts and hardware from box and lay out on a carpeted or scratch-free work surface. The shipping box
 provides an ideal work surface. Do not dispose of any contents until assembly is completed to avoid accidentally
 discarding small parts or hardware.
- Use the parts and hardware lists to identify and separate each of the pieces included prior to starting assembly.
- Note: DO not fully tighten the bolts until all parts are in place. Failure to follow these instructions may cause the bolts to misalign during assembly.
- Do not use power drill as it may cause cracking.


ASSEMBLY INSTRUCTIONS:

1. Remove all furniture parts from box and put them on a soft, scratch free surface such as a carpet or rug. Fit Short Divider (F), Short Shelf (G), Left Panel (C), and Long Divider (E) to each other using the corresponding dowel and hole locations on each part (as shown below).

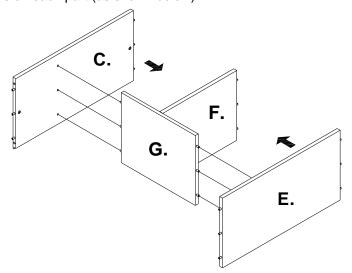

2. Fit Bottom Panel (B) to the assembled above, by using the corresponding dowel and hole locations on each part. Align and fit the Right Side Panel to Bottom Panel (B). Slide a Spring Washer (L) and a Flat Washer (M) onto each Long Bolt (J). Attach the Bottom Panel (B) to the assembled piece and Right Side Panel (D) as shown below. Use (2) Long Bolts with washers to secure Bottom Panel (B) to each Left/Right Side Panel (C&D) using Allen Key (I).

Turn the assembled piece upright. Align and attach Top Panel (A) to the assembled piece. Use (2) Long Bolts with washers to secure Top Panel (A) to each Left/Right Side Panel (C&D) using Allen Key (I) as shown below.

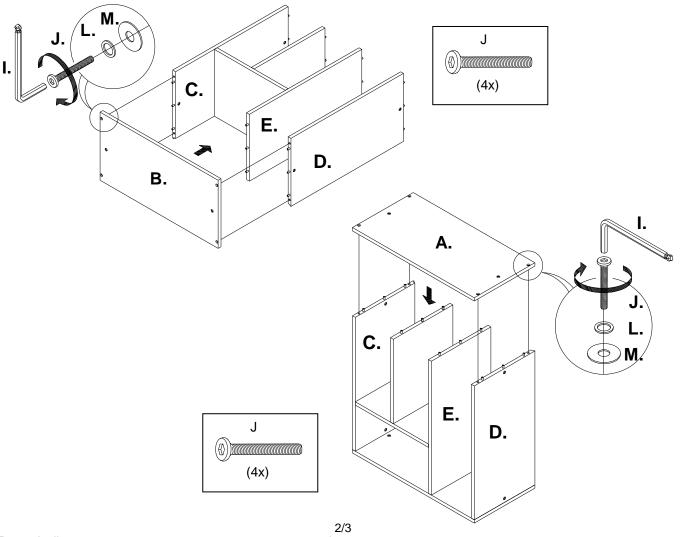


www.pbteen.com


Date - April 10, 2012

3. Attach Back Panel (H) to back side of the assembled piece. Secure the back panel to the frame with (24) Wood Screws (O) and secure the back panel to dividers and short shelf with the remaining (7) Wood Screws (O).

Use Short Bolts (K) and End Cap (N) to fill the connecting holes on Top/Bottom and Side Panels.

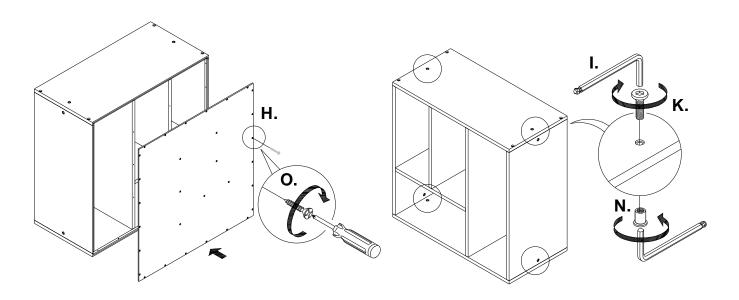

4. When stacking and connecting bookcases to each other, insert Long Bolts (J) through corresponding holes located on Top/Bottom/Side Panels and use End Cap (N) from other end to secure bookcases to each other.

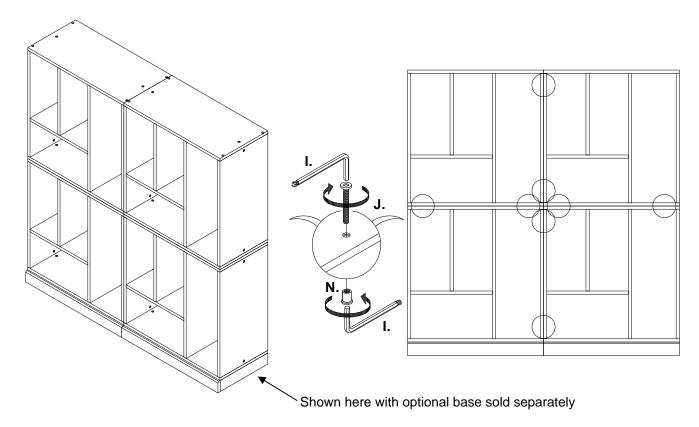

CARE INSTRUCTIONS:

- Dust often using a clean, soft, dry lint-free cloth.
- Blot spills immediately, and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.