

Adding Wheels to your Rhino™ Trunk

1. Set the trunk on the floor so that the wheel plates are in front of you.
2. Hold the wheel in your hand so that the moveable lever is at the top and the wheel is at the bottom.
3. Holding the wheel at about the 2 o'clock position insert the two knobs on the wheel into the slots on the wheel plate and rotate the wheel in the counter-clockwise direction until the wheel snaps into place.

BE SURE TO REMOVE WHEELS PRIOR TO SHIPPING

Removing Wheels

Pull out on the lever at the top of the wheel assembly and rotate the wheel in the clockwise direction until the wheel comes off. You do not have to hold the lever out during the entire rotation process – only until you have released the wheel from the locked position.

