

Oxford Media Assembly Instruction

Safety Instructions:

- The top shelf of this TV stand is intended for use with:
 - Plasma/LCD/DLP/HD television having a maximum screen size of 50 inches and weight of 135 lbs:
- The other support shelf should not be loaded more than 25 lbs.
- This unit contains a permanent sticker located either beneath top shelf or inside drawer.

Caution:

Electronic component that generate heat, may cause damage to the equipment. Please refer to the manufacturer's owner's manual for space and ventilation requirement.

Pre-Assembly:

 
- Please read all instructions before beginning assembly.
- For your safety and convenience, assembly by two adult is recommended.
- Carefully set out and identify all part hardware prior to assembly.
- Save all packing materials until assembly is complete to avoid accidentally discarding small part or hardware.

Part Enclosed in Box 1:

- (1) Top Panel(A)
- (2) Side Panels(B)
- (1) Storage Cabinet(C)
- (1) Partition Panel(D)
- (1) Back Panel(E)
- (1) Leg support(F)


Hardware Enclosed:

- (14)Allen Bolts M6 x 35mm (G)
- (2) Allen Bolts M6 x 50mm (H)
- (12)Wooden Dowels M8 x 30 (I)
- (1) Allen Key M4(J)
- (7) Screw 6 x 5/8"(K)

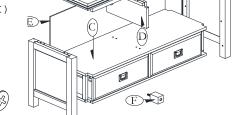


To Assemble:

 
1. Carefully lay the side panel (B) on a flat scratch-free or carpeted surface. Insert the wooden dowels (I) into the holes on one side panel (B), as shown in figure 1.

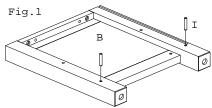



2. Remove the drawers from the storage cabinet (C) as shown in fig 2. Attach the storage cabinet (C) to the side panel (B) by inserting the wooden dowels (I) on the side panel (B) into the holes on the side frame of the storage cabinet (C). Insert the Allen Bolts (G) through the holes on the cleat and the side frame of the storage cabinet (C). Tighten with the Allen Key (J)(Do not over tighten), as shown in figure 3, illustration 1.

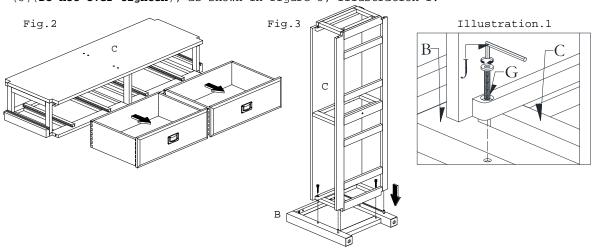


- 3. Attach the leg support (F) by inserting the hanger bolts into the female insert on the bottom frame of the storage cabinet (C). Hand tighten until snug (Do not over tighten), as shown in figure 4, illustration 2.
- 4. Insert the wooden dowels (I) into the holes on the storage cabinet(C). Attach the other side panel (B) to the storage cabinet (C). Insert the Allen Bolts (G) through the holes on the cleat and the side frame of the storage cabinet (C), tighten with the Allen key (Do not over tighten), as shown in figure 4, illustration 3.

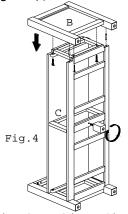

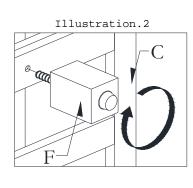


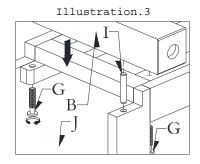

- 5. Grip the cabinet firmly and turn upright. Insert the wooden dowels (I) into the holes on the top panel of the storage cabinet (C). Attach the partition panel (D) to the cabinet by inserting the wooden dowels (I) on the cabinet (C). Insert the Allen bolts (H) through the holes in the storage cabinet (C) tighten with the Allen key (J), as shown in figure 5, illustration 4.
- 6. Attach the back panel (E) by sliding in the back of the cabinet. Insert the screw (K) into the predrilled holes on the back panel (E) and tighten with the screwdriver (not included). Insert the wooden dowels (I) into the holes in the cleat of the side panels (B) and partition panels (D), as shown in figure 6.

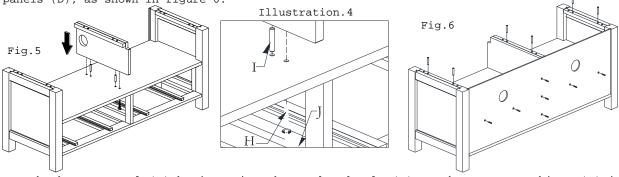

- 7. Attach the top panel (A) by inserting the wooden dowels (I) on the storage cabinet (C) into the holes on the top panel (A). Insert the Allen bolts (G) through the holes on the cleat of the side panel (B) and partition panel (D) to the female inserts in the top panel (A). Tighten with Allen key (J) (Tighten all connections), as shown in figure 7, illustration 5.
- 8. Put the drawers back the previous positions, as shown in figure 8.

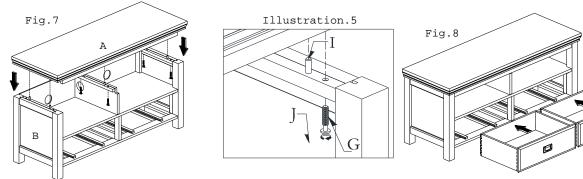

Care Instructions:

- Avoid direct sunlight and excessive temperatures.
- Dust often using a clean, soft, dry and lint-free cloth.
- Waxing is not recommended on lacquered finish.
- Please wipe up all spills immediately.