


# **Beadboard Bed**

### Pre-assembly:

- Please read all instructions before beginning assembly.
- Two-adult assembly is recommended.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.
- An extra wooden knob is included for your convenience.

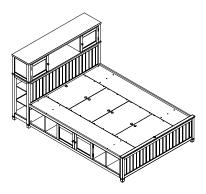


### Part Included:

A – Headboard – 1pc




**B** – Siderail storages (L&R) – 2 pcs

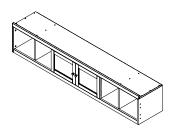


C - Footboard - 1 pc



**D** – Center platforms – 4pcs







### Hardware Included:

F - Wooden knob bolts (5/32" x 25mm)-6pcs G - Wooden knobs-6pcs H - Hex bolts(5/16" x 1-1/4")-8pcs









L - Flat washers(5/16" x 15 x2mm)- 8pcs

M – Spring washers N – Wooden Dowels- 8 pcs (5/16" x 13mm) – 8 pcs






## **Tools Required:**


Phillips Head Screwdriver (not included)

## Assembly:

- 1. On a soft, scratch-free surface, such as a carpet or rug, remove the Headboard (A) from box.
- 2. Determine the desired height for Shelves (E) using the corresponding peg holes in the Headboard (A) interior. Insert the Shelf Pegs (K) into the pre-drilled holes until they are fully secure. Place each Adjustable Shelf (E) onto the Shelf Pegs (K), making sure they are stable.

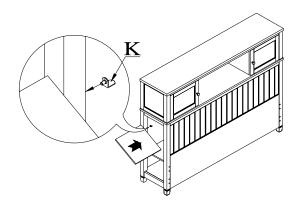


3. Gently attach both Wooden Knobs (G) to doors. Hold the Wooden Knobs (G) over the pre-drilled holes in door fronts. Screw wooden knob bolt (F) through the rear of the door front so that it enters the Wooden Knob (G), using Phillips Head Screwdriver. Adjust recessed levelers on the bottom of the legs if needed.

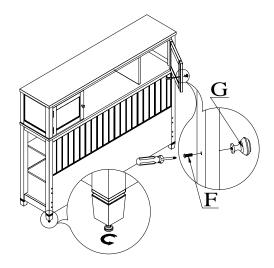


www.pbteen.com

- 4. Continue attaching Wooden Knobs (G) to doors of both Siderail Storages (B), the same as Headboard (A). Move the Siderail Storages (B) to the Headboard (A) and Footboard (C), as shown below. Insert Wooden dowels (N) into the two middle pre-drilled holes on each end of the Siderail Storage (B) and attach the Siderail Storages (B) to the Headboard (A) and Footboard (C) by inserting the exposed part of the Wooden dowels (N) into the corresponding pre-drilled holes in the legs of Headboard (A) and Footboard (C).
- 5. Slide a Spring Washer (M), followed by a Flat Washer (L) onto a Hex Bolt (H). Insert Hex Bolts (H) through the other pre-drilled holes of the Siderail Storage (B) into the pre-drilled holes in the legs of the Headboard (A). Loosely tighten the Hex Bolts (H) by using enclosed Allen key (I), as shown in the illustration below. Do not fully tighten the Hex Bolts (H) until all are in place to avoid misalignment.
- 6. Repeat with Footboard (C). Adjust the recessed levelers located at the base of each leg and underneath both Siderail Storages (B) by turning the levelers counter clockwise until adequate contact is made with the floor to make sure the whole assembly is balanced.

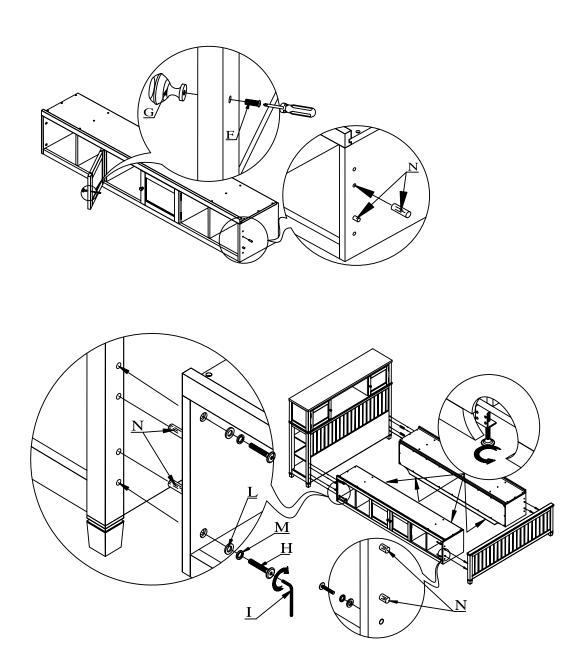

7. Lay the 4 Center Platform pieces (D) in place over the lips of both Siderail Storages (B). Insert Phillips Head Screws (J) and fasten by using the Phillips Head Screwdriver, as shown.

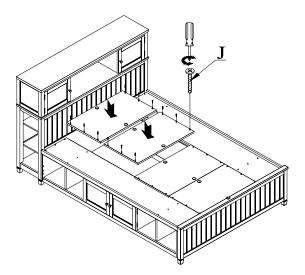

8. Hardware should be checked periodically for tightness.

### **Care Instructions:**

- Avoid direct sunlight and excessive temperatures.
- Dust often using a clean, soft, dry and lint-free cloth.
- Slightly moisten cloth with water. A damp cloth holds dust and prevents scratching.
- Waxing is not recommended on lacquered finish.



## **Beadboard Low Tower**

### Pre-assembly:

- Please read all instructions before beginning assembly.
- Two-person assembly is recommended.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.



### **Assembly Instructions:**


### Option I:


You can use this bookcase as is, after removing all packing materials.

#### Option II:

You can adjust the shelves with these steps below:

- 9. Before removing the shelves, unscrew and remove the screws, which are attached to the shelf pegs underneath the shelves, with a Phillips Head Screwdriver.
- Determine the desired height for shelves using the corresponding peg holes located on the interior of the bookcase.
- 11. Insert the shelf pegs into the pre-drilled holes until fully secure. Place the shelves onto the shelf pegs, making sure the shelf is stable. Reinsert and tighten the screws back into the shelves by inserting the screws through the pre-drilled holes of the shelf peg into the underside of the shelf. See illustration.

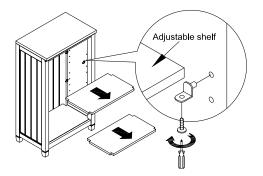

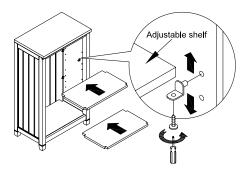

- 12. Adjust the recessed levelers located at the base of each leg to keep the bookcase level.
- 13. Hardware should be checked periodically for tightness.

### **Care Instructions:**

- Avoid direct sunlight and excessive temperatures.
- Dust often using a clean, soft, dry and lintfree cloth
- Slightly moisten cloth with water. A damp cloth holds dust and prevents scratching.
- Waxing is not recommended on lacquered finish.

