

# Lilac Bed - Queen Size

# Pre-assembly:

- Please read all instructions before starting to assemble.
- Two adults are recommended during assembly.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.



## Parts included:

A – Headboard - 1 pc.

B – Footboard - 1 pc.


C - Slat Roll - 1 set.









E- Support Rail - 1 pc.

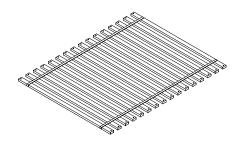

F- Support Legs - 3 pcs.

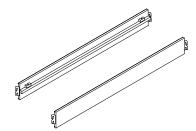





#### Hardware Included:

G – Wood Screw (32 mm) - 32 pcs. H – Wood Screw (16 mm) - 4 pcs.


# Tools required but not included:

Phillips Head Screwdriver



## Assembly:


- 1. Hold the Headboard (A) in a vertical position tilted slightly forward. Attach each Siderail (D) to the Headboard (A) by inserting the hooked ends of the Siderail (D) into the corresponding slots in the Headboard (A), as shown in below illustration. Push down firmly on the top of the Siderails (D) until they seat themselves over the pins inside the legs slots. Be sure the small ledge on each Siderail (D) is facing inward. There are two levels for the Siderails (D). If you plan on using a trundle, please use the highest setting.
- 2. Repeat with the Footboard (B).

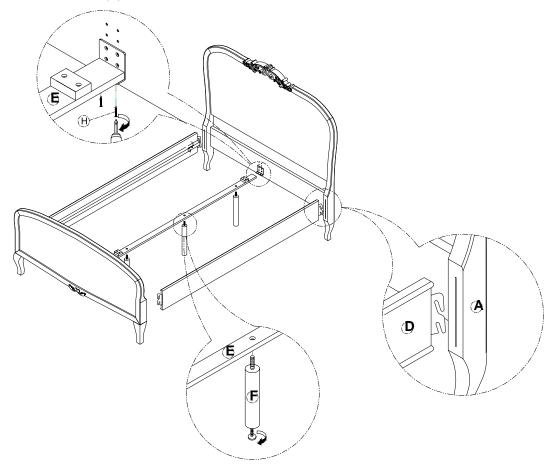

3. Thread the Support Legs (F) with levelers into the pre-drilled holes on the bottom of the Support Rail (E). Please make sure the Support Legs (F) are inserted into the side of the Support Rail (E) that does not feature any pre-attached wood blocks.

**NOTE:** Three positions for the Support Rail (F) are provided. The lowest position on the Headboard (A) and Footboard (B) are for when no trundle is used. If using a trundle, please unscrew the metal bracket on the Headboard (A) and Footboard (B) and then re-attach to the upper pre-drilled holes. This provides enough room so the trundle will not hit the Support Rail (E).

- 4. Place the Support Rail (E) onto the metal brackets located on the Headboard (A) and Footboard (B), making sure the pre-attached wood blocks on the Support Rail (E) are facing up. Fasten the Support Rail (E) into place by screwing the Wood Screw (H) through the pre-drilled holes of the Support Rail (E) and into the metal brackets on the Headboard (A) and Footboard (B). Adjust the recessed levelers located at the bottom of each Support Leg (F) by turning the levelers counter-clockwise until adequate contact is made with the floor.
- 5. Lay the Slat Roll (C) on the inner ledges of the Siderails (D). Using a Phillips Head Screwdriver, fasten the slats to the Siderails (D) with Wood Screw (G). Adjust the recessed levelers located at the bottom of each leg to keep the whole assembly level.
- 6. Periodically tighten all connections.

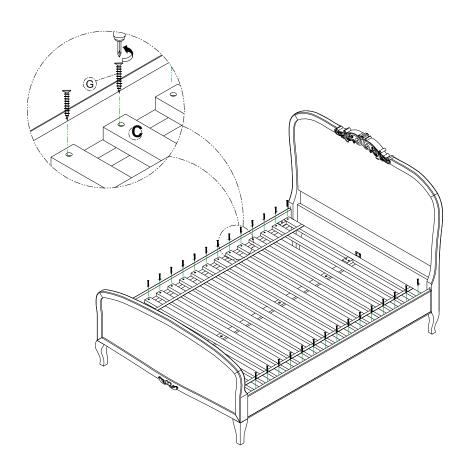

## **Care Instructions:**

- Avoid direct sunlight and excessive temperatures.
- Dust often using a clean, soft, dry and lint-free cloth.
- Slightly moisten cloth with water. A damp cloth holds dust and prevents scratching.
- Waxing is not recommended on lacquered finish.