


Oxford Bedside Assembly Instruction


Pre-Assembly:

- Please read all instructions before beginning assembly.
- For your safety and convenience, assembly by two adult is recommended.
- Carefully set out and identify all part hardware prior to assembly. Save all packing materials until assembly is complete to avoid
- accidentally discarding small part or hardware.

Hardware Enclosed:

- Parts Enclosed: • (1) Storage (A)
- (2) Side panel (B)
- (1) Bottom Shelf (C)
- (4) Allen Bolts M6 x 45mm (D) \bullet (1) Allen Key M4 (H) (8) Allen Bolts M6 x 25mm (E)
- (4) Spring Washers (F)
- (4) Half Moon Bracket (G)

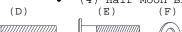

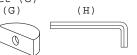






(4) Screw M6 x 3/4"(I)

To Assemble:

- 1. Remove the drawer from the storage (A), as shown in figure 1.
- 2. Carefully lay the storage (A) upside down on a flat scratch-free or carpeted surface. Attach the side panel (B) by aligning wooden dowels (H) on the storage (A) to the holes on the side panel (B). Insert Allen bolts (E) through the holes on the side panels (B) of the storage (A). Tighten with the Allen key (I) (Do not over tighten), as shown in figure 2, illustration 1.

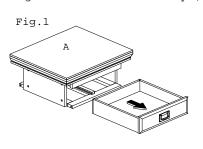


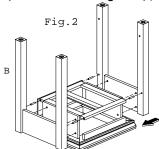

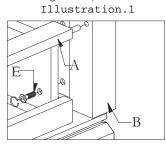

0

- 3. Attach the bottom shelf (C) by aligning the holes on the bottom shelf (C) to the holes on the post. Place half moon bracket (G) spring washers (F) onto the Allen bolts (D) to the cutout of the bottom panel. Tighten with Allen key (H) as shown in figure 3, illustration 2.
- 4. Tighten all connections.
- 5. Attach the screws (I) into the pre-drilled hole on the back panel of the storage (A). Tighten with the screwdriver (Not included), as shown in figure 4, illustration 3.
- 6. Grip the cabinet firmly and turn upright. Put the drawer back to previous position, as shown in figure 5.

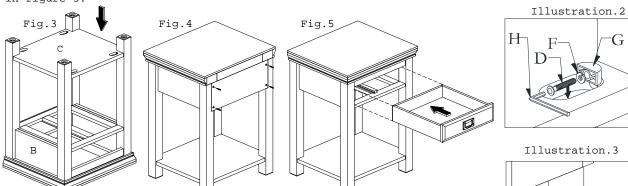

Care Instructions:

- Avoid direct sunlight and excessive temperatures.
- Dust often using a clean, soft, dry and lint-free cloth.
- Waxing is not recommended on lacquered finish.
- Please wipe up all spills immediately.