

Oxford Desk Storage Assembly Instruction

Pre-Assembly:

- Please read all instructions before beginning assembly.
- For your safety and convenience, assembly by two adult is recommended.
- Carefully set out and identify all part hardware prior to assembly.
- Save all packing materials until assembly is complete to avoid accidentally discarding small part or hardware.

(K)

(L)

• The Oxford Left/Right Storage is designed for use with the Oxford Desk top.

(I)

(J)

Α


Part Enclosed in Box 1:


- (1) Left Storage with drawers (A)
- (1) Right Storage with door
 - (2) Side Panels (B)
 - (1) Fixed Shelf (C)
 - (1) Bottom Panel (D)
 - (1) Door Panel (E)
 - (1) Back Panel (F)
 - (1) Back Rail (G)
 - (1) Shelf (H)


Hardware Enclosed:


- (4) Allen Bolts M6 x 40mm (I)
- (12)Wooden Dowels M8 x 30 (J)
- (1) Allen Key M4 (K)
- (17)Screws 6 x 3/4" (L)
- (4) Bolts M4 x 1/4" (M)
- (4) Shelf Pins (N)
- (4) Allen Bolts M6 x 55mm (0)
- (4) Screws 6 x 5/8" (P)

To Assemble:

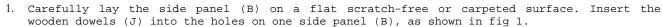

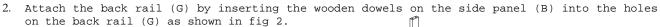

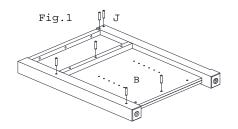

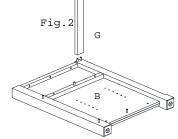


(M)


(0)

(P)


0


3. Attach the fixed shelf (C) by inserting the wooden dowels on the side panel (B) to the holes on the fixed shelf (C). Insert the Allen Bolts (I) through the holes on the cleat of the fixed shelf (C) to the holes on the side panel (B) and tighten with the Allen Key (K), as shown in figure 3, illustration 1.

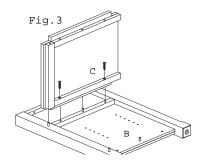

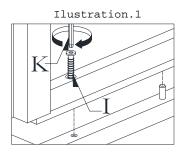


- 4. Attach the bottom panel (D) by inserting wooden dowels on the side panel (B) into the holes on the bottom panel (D). Insert the Allen Bolts (O) through the holes on the cleat of the bottom panel (D) and tighten with the Allen Key (K). As shown in figure 4, illustration 2.
- 5. Insert the wooden dowels (J) into the holes on the back rail (G), fixed shelf (C) and bottom panel (D). Attach the other side panel (B) by Inserting the Allen bolt (I) through the holes on the cleat of the fixed shelf (C) to the holes on the side panel (B) and insert the Allen Bolts (O) through the holes on the cleat of the bottom panel (D) and tighten with the Allen Key (K).as shown in figure 5.

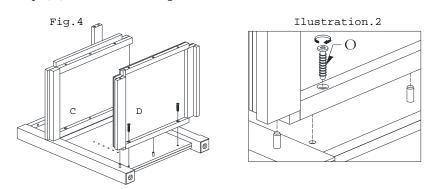

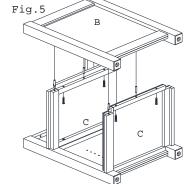

- 6. Grip the cabinet firmly and turn upright. Attach back panel (F) to the back of the cabinet, insert the screws (L) into the holes on the back panel (F) and tighten with the screwdriver (Not Included), as shown in figure 6, illustration 3.
- 7. Attach the door panel (E) to the cabinet post by aligning the holes on the hinge to the female inserts in the cabinet post. Insert the bolts (M) and screws (P) through the holes on the hinge to female inserts tighten with a screwdriver (Not Included), as shown in figure 7, illustration 4.
- 8. Determine the desired height for the shelf (H). Insert the shelf pins (N) into the pre-drilled holes located in the side panels, place adjustable shelf (H) onto the shelf pins (N). Make sure the shelf is stable as shown in fig 8, illustration 5.

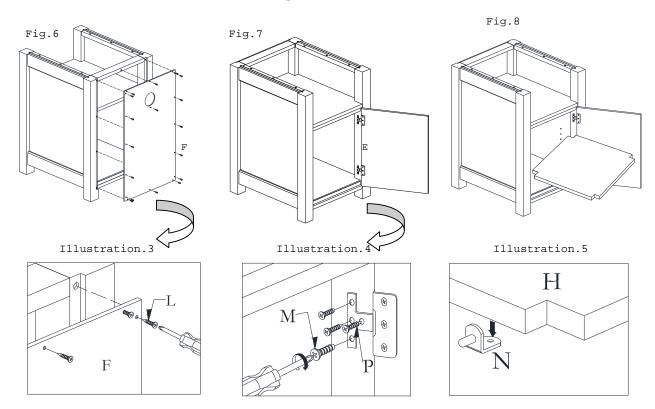

Care Instructions:

- Avoid direct sunlight and excessive temperatures.
- Dust often using a clean, soft, dry and lint-free cloth.
- Waxing is not recommended on lacquered finish.
- · Please wipe up all spills immediately.