

Oxford Desk Top Assembly Instruction

Pre-Assembly:


- Please read all instructions before beginning assembly.
- For your safety and convenience, assembly by two adult is recommended.
- Carefully set out and identify all part hardware prior to assembly.
- Save all packing materials until assembly is complete to avoid accidentally discarding small part or hardware.
- The Oxford Desk Top is designed for use with the Oxford Left/Right Storage.

Part Enclosed in Box 1:

- (1) Desktop (A)
- Needed for assembly:
 - (1) Left storage cabinet with drawers (B)
 - (1) Right storage cabinet with door (C)


Hardware Enclosed:


- (8) Allen Bolts M6 x 40mm (D)
- (4) Wooden Dowels M8 x 30 (E)
- (1) Allen Key M4 (F)




To Assemble:


1. Insert the wooden dowels into the holes on the cleat on the side panels of the cabinet (B,C). Align the holes on the desktop (A) to the wooden dowels (E) on the cabinet. Attach the desktop (A) to the cabinet (B,C) by inserting wooden dowels (E) on the cabinet (B,C) into the holes in the desktop (A).

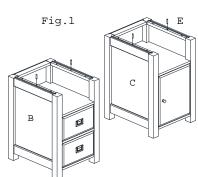

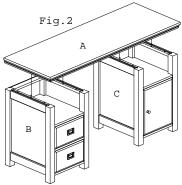

2. Insert the Allen Bolts (H) through the holes on the cleat of the side panel to the female inserts and tighten with the Allen Key (F).

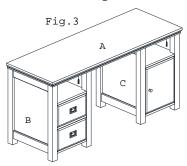

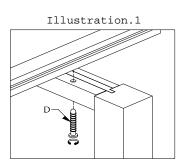

Care Instructions:

- Avoid direct sunlight and excessive temperatures.
- Dust often using a clean, soft, dry and lint-free cloth.
- Waxing is not recommended on lacquered finish.
- Please wipe up all spills immediately.