



Store-It Bed

Pre-assembly:





*Please read all instructions before starting to assemble.

*Two-person is recommended during assembly.


*Remove all parts and hardware from box and lay out on a carpeted or scratch-free work surface, as this will avoid damaging any parts during assembly. The shipping box provides an ideal work surface.

*Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.

Parts Included:

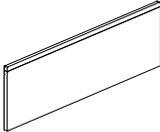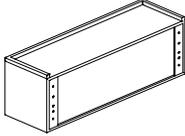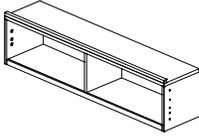A - Headboard – 1 pc	B - Footboard – 1 pcs	C – Side Part – 2 pcs	D - Center Board – 5 pcs
			

Hardware Enclosed:


E - Flat Washer – 12 pcs	F - Lock Washer – 12 pcs	G - Allen Bolt – 12 pcs (M6 x 30 mm)	H - Allen Key – 1 pcs
			
I - Wood Screw – 20 pcs (4 x 20 mm)	J – Wood Dowels – 8 pcs (8x25 mm)		
			

Tool Required:


Phillip Head Screwdriver (Not included)

Assembly Instructions:


1. Insert Wood Dowels (J) into pre-drilled holes at the ends of Side Parts (C) as shown below. Ensure half length of the dowels go into the holes.

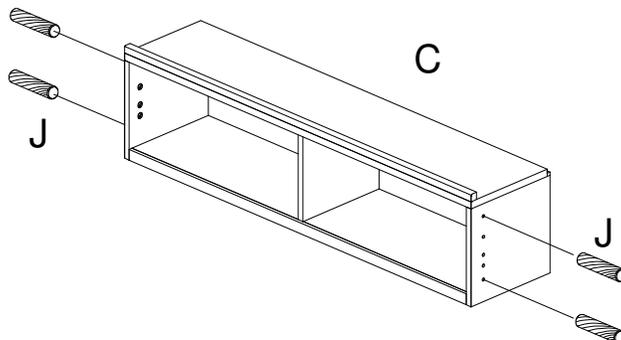


2. Attach Side Parts (C) to Footboard (B) by aligning Dowels (J) with pre-drilled holes at the back of Footboard (B), Secure Side Parts (C) and Footboard (B) with Flat Washers (E), Lock Washers (F) and Allen Bolts (G) by Allen Key (H) as shown below.

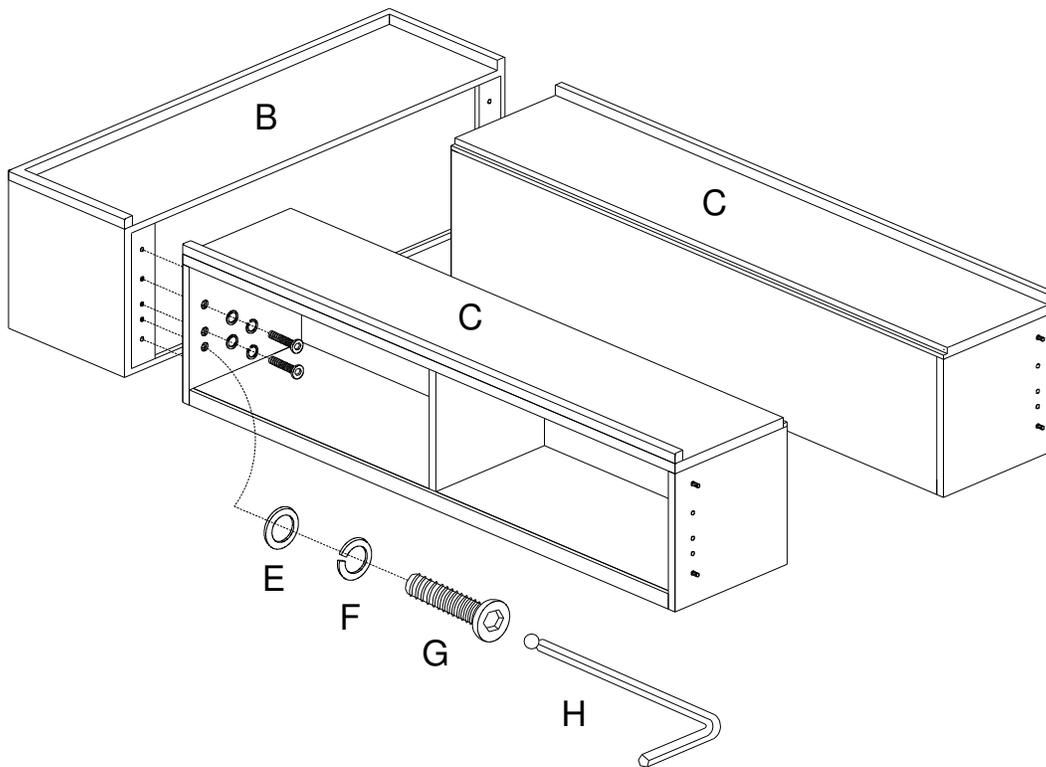

3. Attach Side Parts (C) to Headboard (A) by aligning Dowels (J) with pre-drilled holes at the back of Headboard (A), Secure Side Parts (C) and Headboard (A) with Flat Washers (E), Lock Washers (F) and Allen Bolts (G) by Allen Key (H) as shown below.

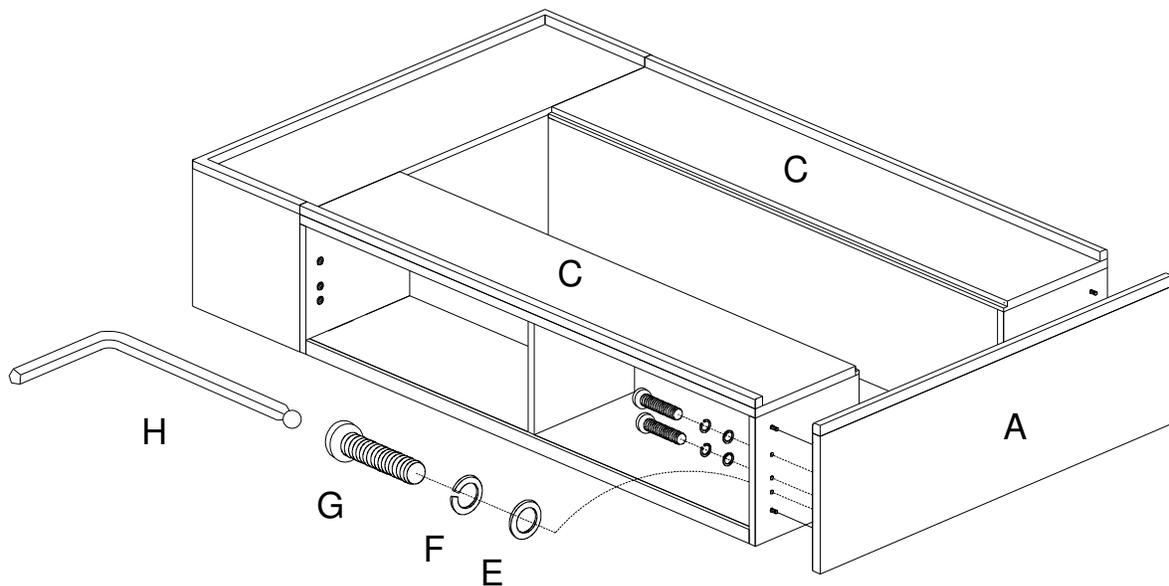

4. Slowly place Center Boards (D) on the top ledges of Side Parts (C). Secure with Wood Screws (I) by a Phillip Head Screwdriver.

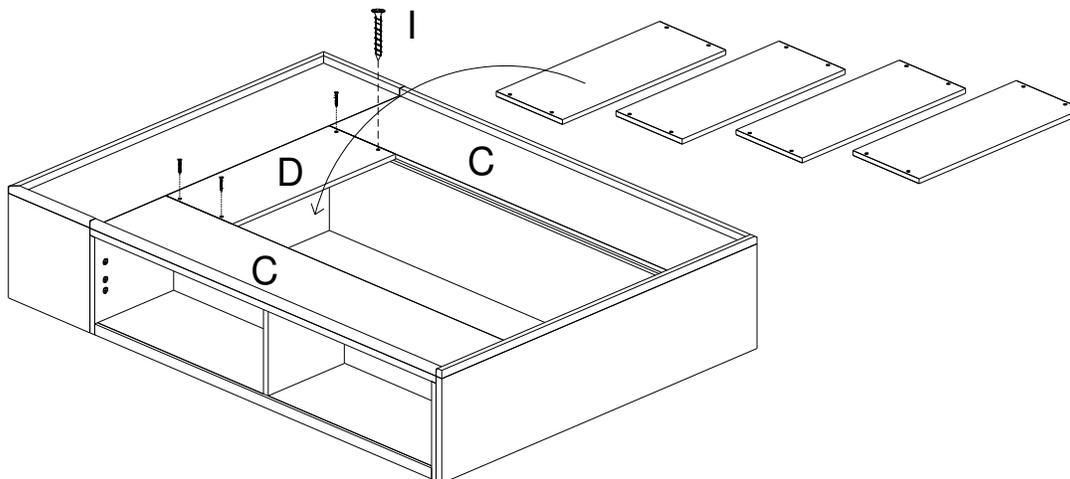

Assembly is completed.

Care Instructions:

- * Avoid direct sunlight and excessive temperatures.
- * Dust often using a clean, soft, dry and lint-free cloth.
- * Slightly moisten cloth with water. A damp cloth holds dust and prevents scratching.
- * Waxing is not recommended on lacquered finish.



Store – it Bed Corner Unit

Pre-Assembly:

- Please read all instructions before beginning assembly.
- Two-person is recommended during assembly.
- Remove all parts and hardware from box and lay out on a carpeted or scratch-free work surface, as this will avoid damaging any part during assembly. The shipping box provides an ideal work surface.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.

Parts Included:

A – Top Part – 1 Pc	B - Legs – 4 Pcs	C1 – Side Panel (With Groove) – 1 Pc	C2 – Side Panel – 1 Pc
D – Top Panel – 1 Pc			

Hardware Enclosed:


E - Flat Washer – 16 Pcs	F - Lock Washer – 16 Pcs	G - Allen Bolts – 8 Pcs (M6 x 75 mm)	H - Allen Key – 1 Pc
I – Allen Bolts – 8 Pcs (M6 x 50 mm)			

Note:


- all legs are typical in position and interchangeable.
- if you have a store-it bed Twin ways assembly from step 5 and step 6.
- and if you do not have it quite up to step 4.

Assembly Instructions:


1. Carefully lay the Top Part (A) upside down on a carpet or scratch-free surface. Insert the exposed bolt on each Leg (B) into the pre-drilled holes on the Top Part (A). Turn clockwise to tighten. Make sure the pre-drilled holes with inserted nuts on each Leg (B) face out. All legs are typical in position and interchangeable. Carefully turn the assembly upright.

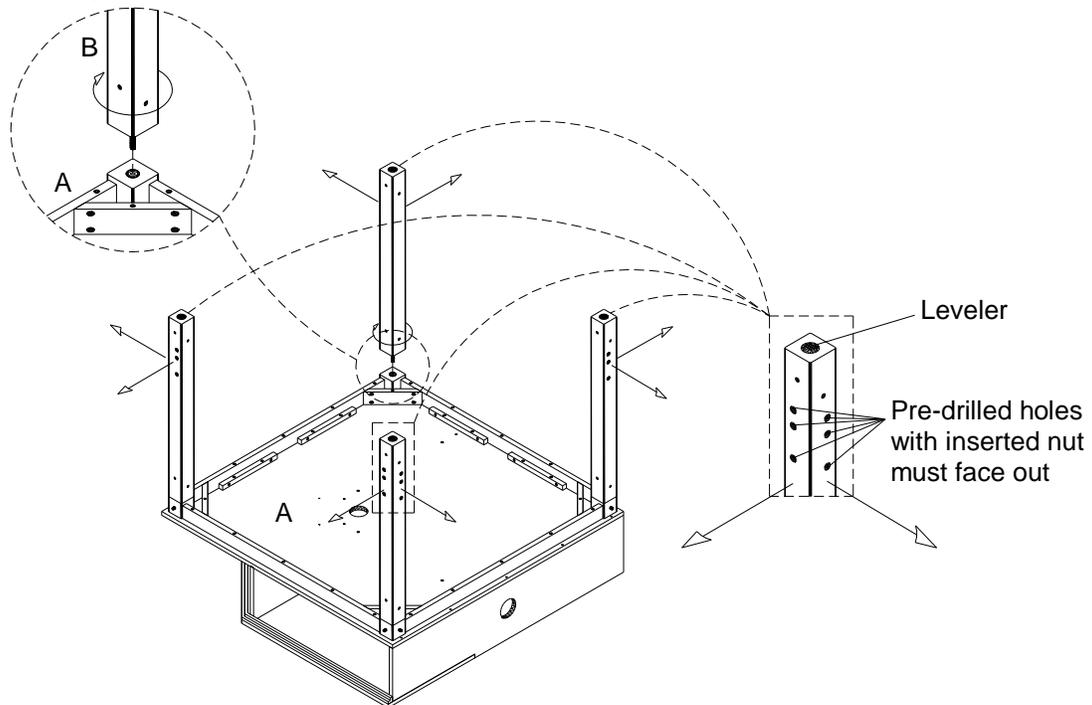


2. Attach the Side Panel (C1) to the Top Part (A) by aligning the two pre-drilled holes at the top corners of the backside of the Side Panel (C1) with the two pre-attached wood dowels on the left side of the Top Part (A). Secure with (4) Flat Washer (E), (4) Lock Washer (F), (4) Carriage Bolts (G) from inside the unit and through the pre-drilled holes on the Legs (B). Tighten with the enclosed Allen Key (H).

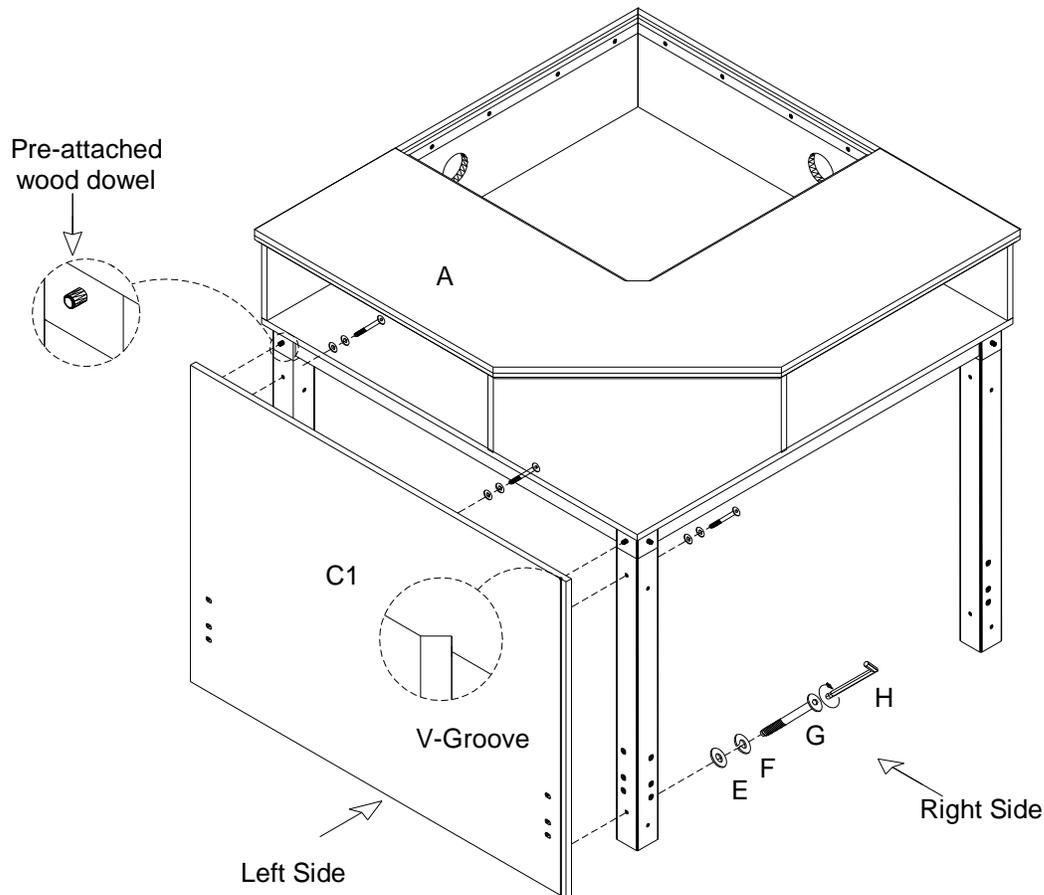


3. Repeat Step 2 for Attaching Side Panel (C2).

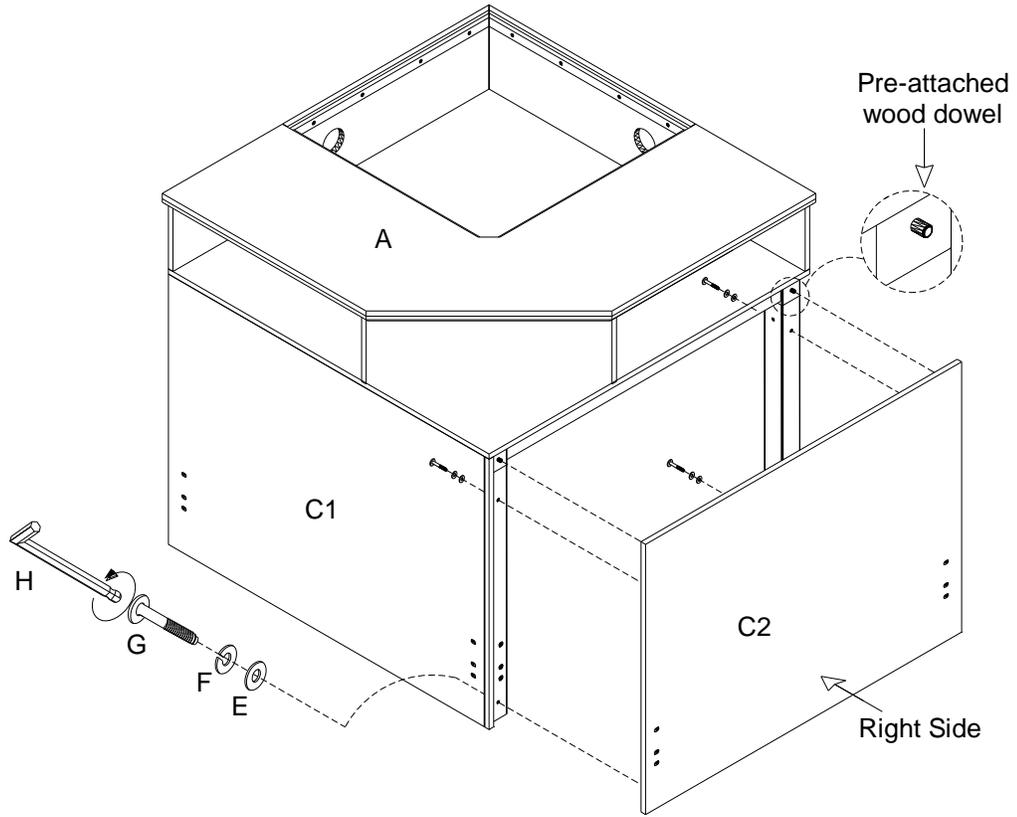


4. Align the edges of Top Panel (D) with its pre-cut shape on the Top Part (A).

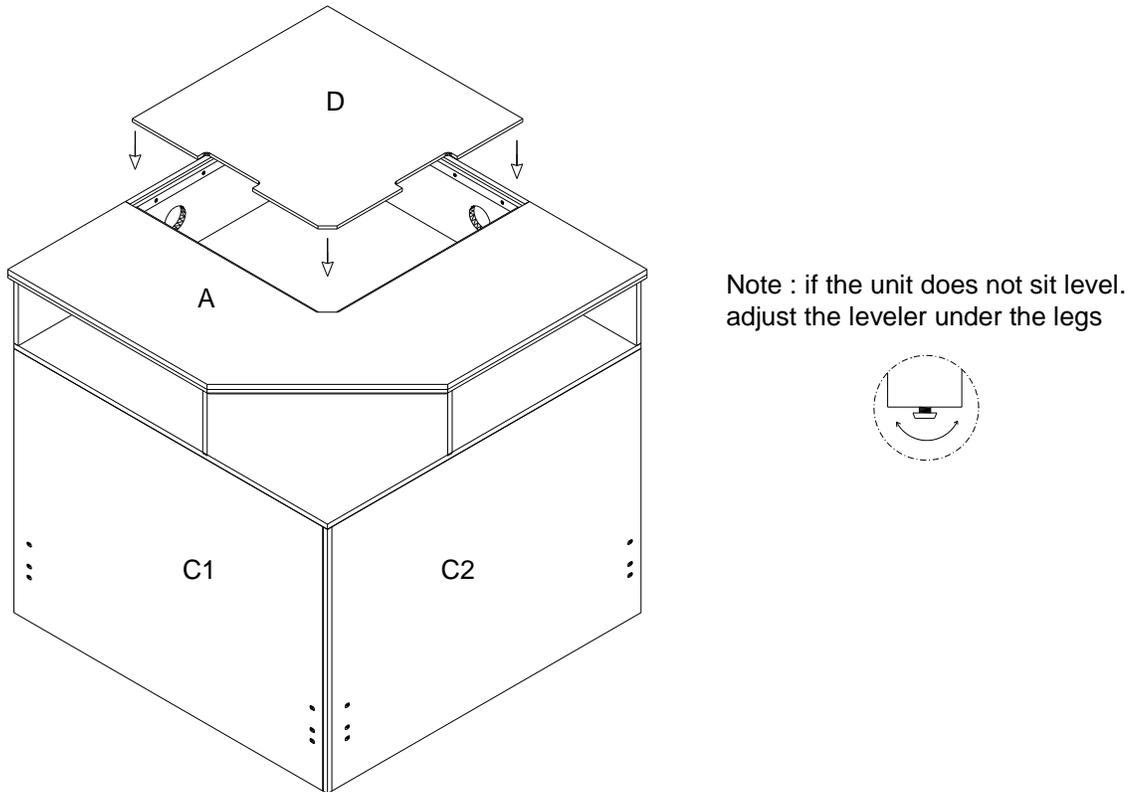

5. Remove Head board with use the allen key to unscrew the allen Bolts at two sides of the bed

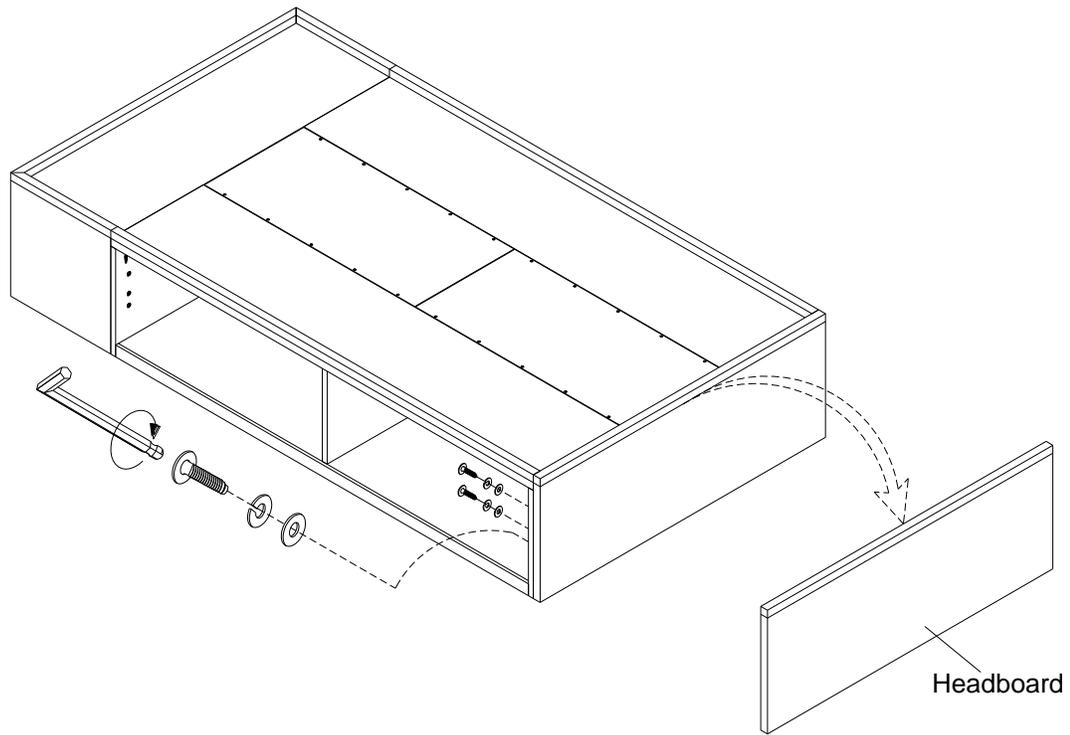

6. Slowly attach the beds with the headboards removed to the two sides of the corner unit. Align the pre-drilled holes on the bed with pre-drilled holes on the side panel of the corner unit. Secures each bed with 4 Lock Washers (F), 4 Flat Washers (E), and 4 Allen Bolts (I) with the Allen Key (H).

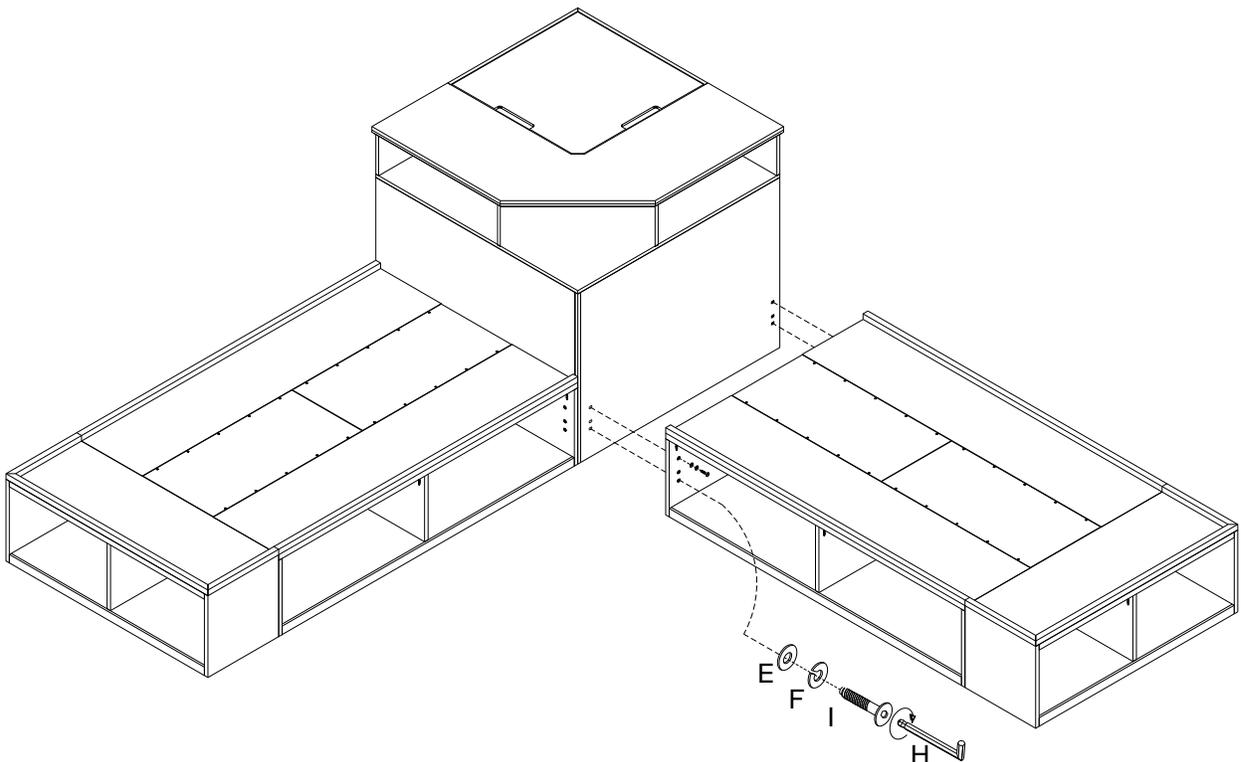

Assembly is completed.

Care Instructions:

- Avoid direct sunlight and excessive temperatures
- Dust often using a clean, soft, dry and lint-free cloth.
- To clean, slightly moisten cloth with water. (a damp cloth holds dust and prevent scratching).