


Stuff Your Stuff Desk

Pre-Assembly:

- Please read all instructions before beginning assembly.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.

Parts Included:

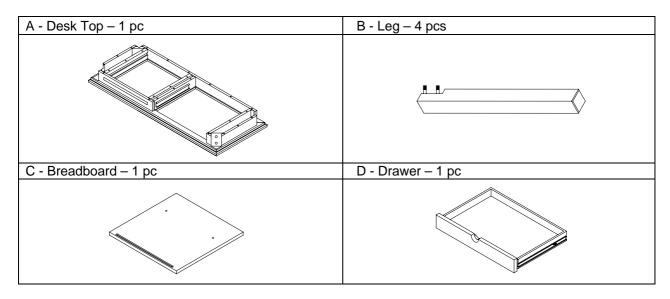

Hardware Included:

E - Flat Washer – 8 pcs	F - Lock Washer – 8 pcs	G - Nut – 8 pcs
H - Allen Wrench – 1 pc	I - Stopper – 2 pcs	

Assembly Instructions:

- 1. Lay the Desk Top (A) upside down on a soft surface or scratch-free surface.
- 2. Attach the Legs (B) by inserting the exposed threads into the pre-drilled holes on the corner blocks. Secure with Flat Washers (E), Lock Washers (F) and Nuts (G) using Allen Wrench (H). See Figure 1.
- 3. Insert the Breadboard (C) into the Desk Top (A) with the insert nut on the breadboard facing up, as shown in Figure 1. Insert and tighten Stoppers (I) into the insert nut on the Breadboard.
- 4. Turn the desk right-side up. Attach the Drawer (D) to the Desk Top (A) by inserting the Drawer's (D) glide, which is pre-mounted on two sides of the Drawer (D), into the runner, which is pre-assembled on the Desk Top (A). Push the Drawer (D) in until the lock stick of the glide on the Drawer (D) stays inside the runner on the Desk Top (A). See Figure 2.

Note: To detach the Drawer (D) from the Desk Top (A). Pull the drawer until it's stopped by the lock stick. Press down on the lock stick on the right side and lift up the left side of the Drawer (D), then pull out to remove it. See figure 2.

Figure 1


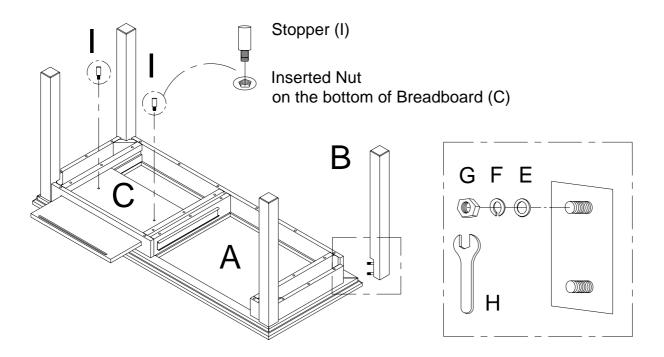


Figure 2



Care Instructions:

- Dust often with a soft, dry cloth.
- To clean, slightly moisten cloth with water (a damp cloth will hold dust and prevent scratching; dry thoroughly).

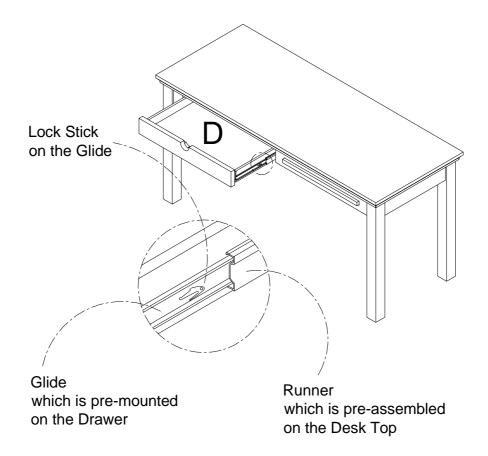


Sys Small Desk Hutch


Pre-Assembly:

- Please read all instructions before beginning assembly.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.

Parts Included:



Parts Need for assembly:

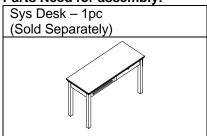

Hardware Enclosed:


(A) Mending Plate – 2 pc	(B) Wood Screw – 4 pcs (3.5 x 15 mm)
00	<i>₹11111</i> (⊕)

Tools Required:

Phillips head screwdriver (not included)

Assembly Instructions:

- 1. Carefully place the Hutch on the top of Desk align the back side of two items as shown below.
- 2. Place the mending plate (A) over the joint line between hutch and desk. Align pre-drilled hole on the plate with pre-drilled hole on the hutch then secure by wood screw (B) with a Phillip head screwdriver. Run another screw into desk top through pre-drilled holes on the other end of mending plate.
- 3. Repeat Step 2 for another mending plate.

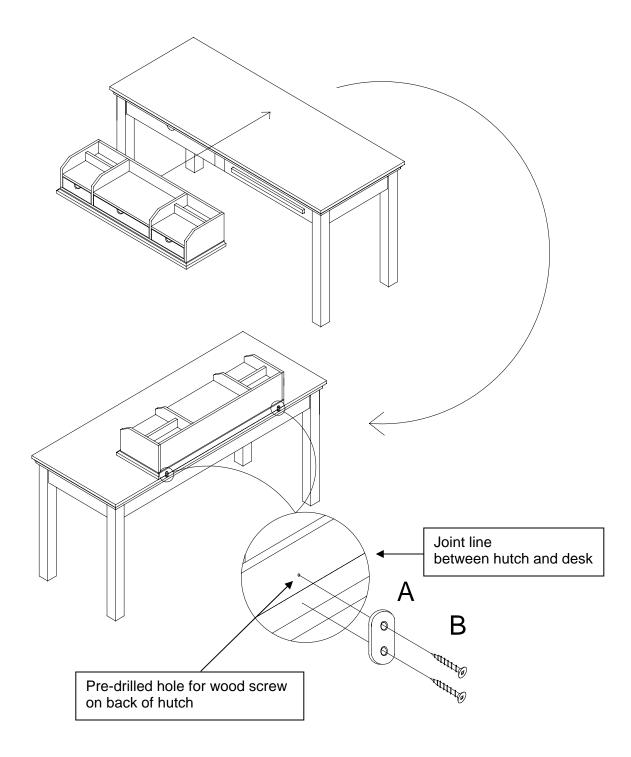

Assembly is completed.

Care Instructions:

- Avoid direct sunlight and excessive temperature.
- Dust often with a soft, dry cloth.
- To clean, slightly moisten cloth with water (a damp cloth will hold dust and prevent scratching; dry thoroughly).
- Waxing is not recommended on lacquered finish.



Stuff-Your-Stuff Tower - Base

Parts Included:

All Tower Base parts and hardware are delivered in one carton.

A - Tower Base - 1 pc


B - Shelf - 1 pc

Hardware Included:

C - Shelf Pin – 4 pcs

Assembly Instructions:

- 1. Insert the 4 Shelf Pins (C) into pre-drilled holes located on the interior walls of the Tower Base (A), at the desired height position.
- 2. Place Shelf (B) onto the Shelf Pins (C), making sure the Shelf (B) is stable.

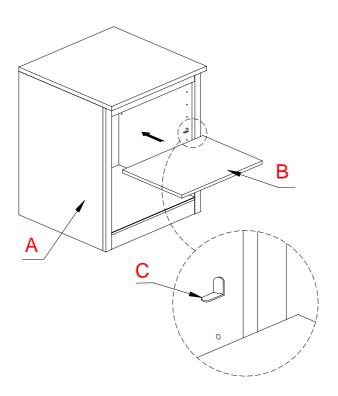

Care Instructions:

Dust often using a soft, dry cloth.

To protect the finish, do not apply abrasives or household cleaners.



Stuff-Your-Stuff Tower – Top

Parts Included:

All Tower Top parts and hardware are delivered in one carton.

A - Tower Top - 1 pc

B - Large Shelf Panel - 2 pcs

C - Small Shelf Panel - 1 pc

Hardware Included:

D - Wood Screw (M 3.5 x 5/8") - 8 pcs

E - Mending Plate (2 15/16" x 13/16" x 1/16") - 2 pcs

F - Shelf Support Wire (9 5/8" x 11/16" x 1/8") - 6 pcs

Tools Required:

Phillips Head Screwdriver (not included)
Drill needed for Tipping Restraint (not included)

Assembly Instructions:

- 1. Insert Shelf Support Wires (F) into pre-drilled holes in the middle of both Large Shelf Panels (B).
- 2. Insert Shelf Support Wires (F) into pre-drilled holes on the underside of the top shelf and on the top of bottom shelf of the Tower Top Unit (A). See Figure 1.
- 3. Attach both Large Shelf Panels (B) by sliding them onto the Shelf Support Wires on Tower Top (A).
- 4. Attach Small Shelf Panel (C) by sliding it onto the Large Shelf Panel's (B) Shelf Support Wires (F).
- 5. Carefully place the Tower Top Unit (A) onto the Tower Base Unit.
- 6. Secure Tower Top Unit (A) to Tower Base Unit by using Mending Plates (E). Place the Mending Plates (E) over the pre-drilled holes located in the rear of the Tower Top (A) and Tower Base Unit. Secure with Wood Screws (D). See Figure 2.

Figure 1

Figure 2

A

B

C

D

Care Instructions:

Dust often using a soft, dry cloth.

To protect the finish, do not apply abrasives or household cleaners.

Furniture Tipping Restraint


Young children may be injured by tipping furniture. The use of a tipping restraint is highly recommended. When properly installed, this restraint could provide protection against the unexpected tipping of furniture due to small tremors, bumping or climbing. We recommend mounting this restraint to a wall stud.

WARNING: This product is only a deterrent. It is not a substitute for proper adult supervision.

Hardware Included:



B - Long Screws - 2 pcs





C - Short Screws - 2 pcs


D - Nylon Strap - 1 pc





Installation Instructions:

- 1. Locate a wall stud behind your furniture. Position a Bracket (A) on the stud approximately 1" below the top of the furniture. Mark and drill pilot hole into the center of the stud with a 3/32" drill bit. Attach a Bracket (A) to the stud with the Long Screws (B) provided.
- 2. On the back of the furniture, the second Bracket (A) will need to be attached to the furniture frame at the top. To do this, temporarily move the furniture into its final position and mark the location of the wall's Bracket (A) on the furniture frame with a pencil.
- 3. Move the furniture away from the wall and place a Bracket (A) on the mark. Using the marks from the previous step as a guide, drill holes for screws with a 3/32" drill bit. Attach the bracket to the furniture with the Short Screws (C) provided.
- 4. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread the Nylon Strap (D) through the Brackets (A), as shown in the illustration. Tighten strap until snug. Do not overtighten.

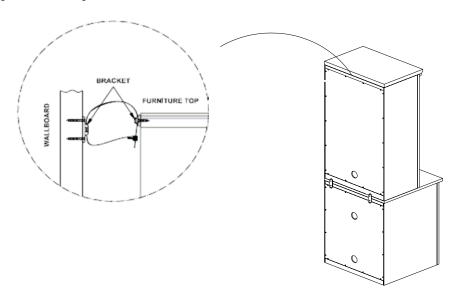



Stuff-Your-Stuff Desk Cart

Pre-Assembly:


- Please read all instructions before beginning assembly.
- Place all parts on a carpet or foam in shipping box. Find the round sticker with letter (A,B,C,...) on each part and check with below part list to ensure we have all components.

Α

C

- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.
- This cart requires two people to do assembly.

Parts Included:

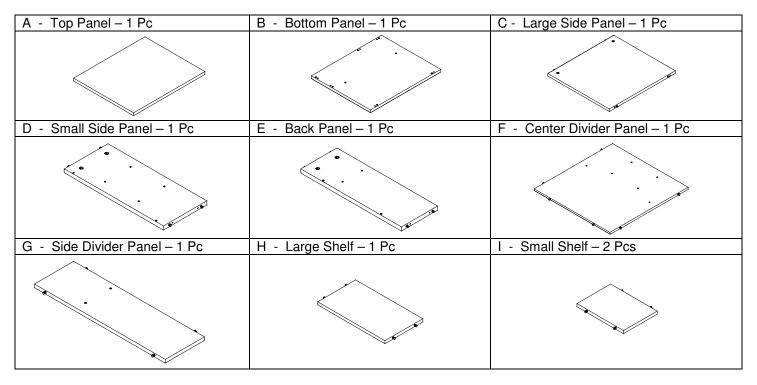


Hardware Enclosed:

Harawaro Endicocar	-	-
J - Cam Bolt – 6 Pcs	K - Cam Clock – 6 Pcs	L - Allen Key – 1 Pc
M - Con-format Screw – 6 Pcs	N – Caster – 4 Pcs (2 with brake and 2 without)	O – Wood Screw – 16 Pcs
		(f) (111111)

Tools Required:


Phillips Head Screwdriver (not included)



Assembly Instructions:

1. Place the Center Divider Panel (F) with the side has pre-drilled holes facing up. Attach two Small Shelf (I) onto the Center Divider Panel (F) by inserting the two exposed dowels on the longer edge of shelf into pre-drilled hole on panel. Note: The panels has pre-installed dowels on two sides. We are setting all dowel sides in below illustration. That is also direction of panel in assembly. 2. Attach The Side Divider Panel (G) on Center Divider Panel (F) next to Small Shelves (I) and by inserting dowels into pre-drilled holes. G D 3. Attach the Small Side Panel (D) onto Small Shelves (I) and Side Divider Panel (G) by aligning the pre-drilled holes with exposed dowels. Slightly press down until tight.

2/5 www.pbteen.com

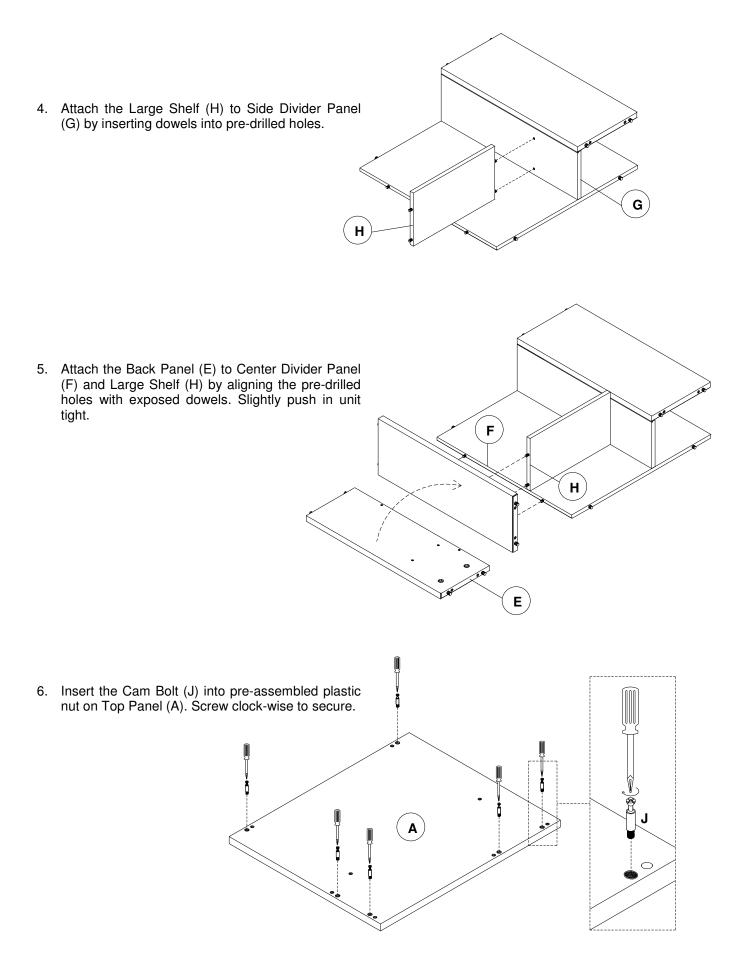


7. Slowly turn up the panels that has been assembled and attach onto the Top Panel (A). Align the dowels on panels with just installed Cam Bolt (J).


Note:


С

Until this assembly step. The panels are jointed together by dowels only. They may easy to fall apart. Arrow marks below show the place should give hand to keep.

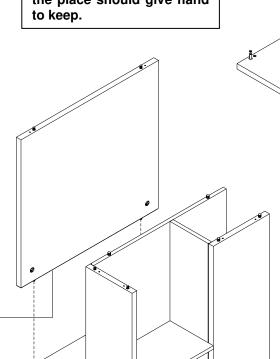


8. Attach the Large Side Panel (C) on the Top Panel (A). Align the dowels on the side with pre-drilled holes on top.



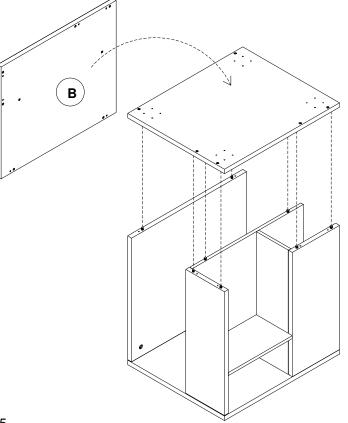

10. Insert the Cam Lock (K) into the pre-drilled hole on Large Side Panel (C), Small Side Panel (D) and Back Panel (E). Two for each panel with the arrow mark on the cam lock turn down at 90 degree with Top Panel (A). This will ensure the head of cam bolt could slot into the cam lock. Tighten Cam

Lock (K) with Allen Key (L).

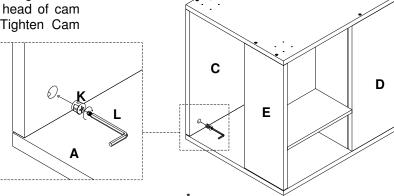


11. Insert the Con-format Screw (M) into pre-drilled holes on the bottom panel (B). Turn Clock-wise to secure using Allen Key (L)

В

12. Place the Casters (N) onto the Bottom Panel (B). Ensure two same Casters (with or without brake) stay at diagonal corners. Align the (4) holes on metal plate of caster with pilot holes on bottom panel. Secure by wood Screws (O) using a Philips

head screwdriver.

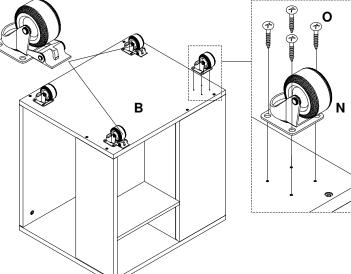

13. Turn up the Cart. Assembly is completed.

Care Instructions:

- Hardware my loosen over time. Periodically check to make sure all connections are tight. Re-tighten if necessary.
- Dust often using a clean, soft, dry and lint-free cloth.
- To clean, slightly moisten cloth with water. (a damp cloth holds dust and prevent scratching; dry thoroughly)
- Periodically tighten the Cam Lock to ensure the cart stays firmly.
- Waxing is not recommended on lacquered finish.