

CONGRATULATIONS!

Here's your new style-tile wall panel system with frame,
the easiest system to hang in 5-easy steps!

5-easy steps

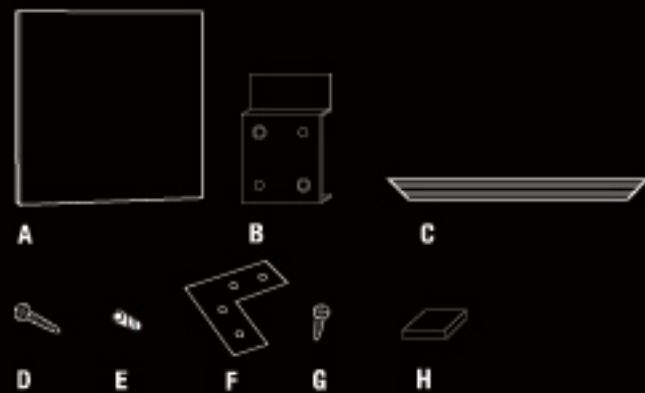
1. mark bracket positions
2. install top brackets
3. select and hang panels
4. continue adding panels
5. assemble frame

So go ahead and open it up - and get started...
the instructions will lead you through the 5-easy steps!

**STYLE-TILE WALL PANEL SYSTEM WITH FRAME**

PATENT PENDING

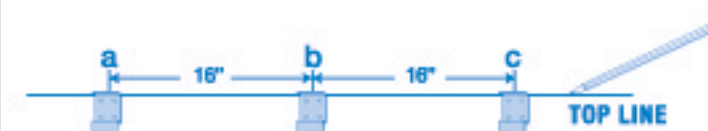
PARTS: A. PANELS B. BRACKETS C. FRAME D. SCREWS E. ANCHORS
F. L-BRACKETS G. SMALL SCREWS H. FOAM PEG



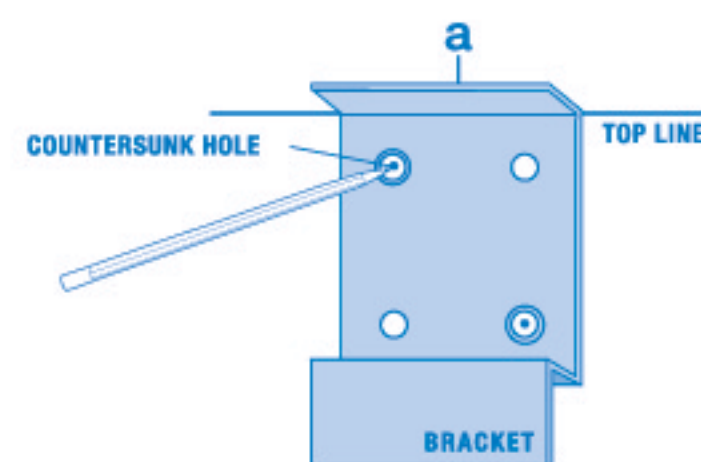
TOOLS: LEVEL, PENCIL, PHILLIPS SCREWDRIVER, AND TAPE MEASURE.

1. Mark bracket positions

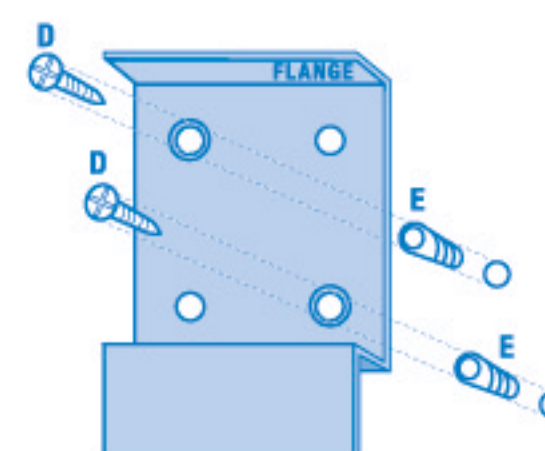
The style-tile panels are hung with brackets. Each panel will have one bracket at the top, one at its bottom, and brackets on the sides.
We are only showing as an example a 2 x 3 configuration.
Please draw the top line according to your configuration.



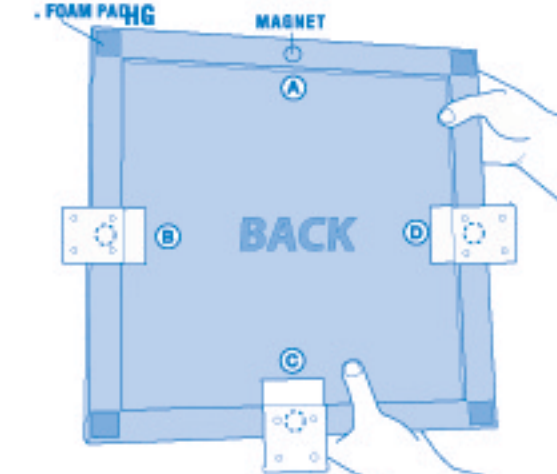
Draw a level line on the wall.
Mark the positions (a, b, c) as shown, for each bracket (16" apart).



Position each bracket along the top line at each point (a, b, c) and use a pencil to mark the wall through each of the two countersunk holes of the bracket, as shown.

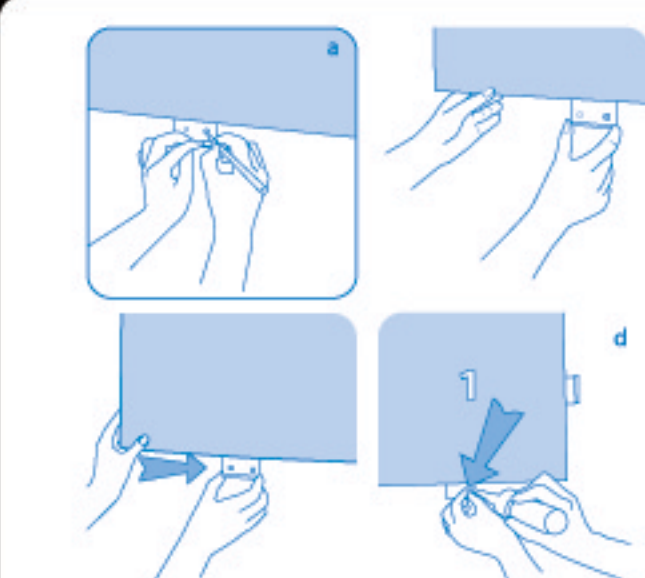
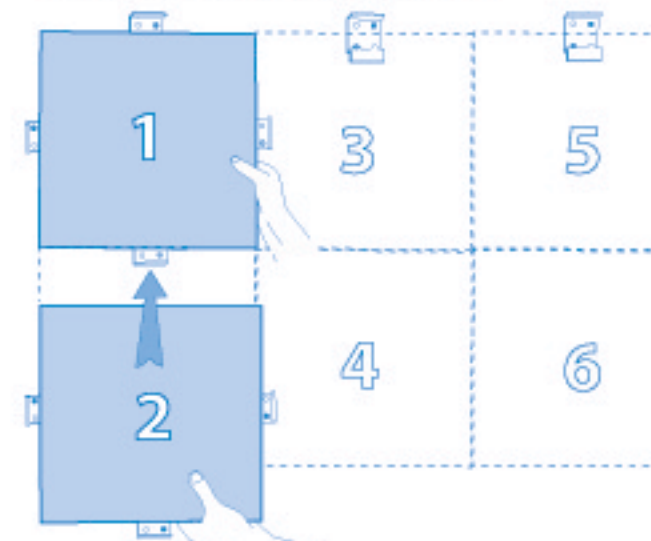
2. Install top brackets

Screw a wall anchor into the wall at each pencil mark. To install a wall anchor, use a Phillips head screwdriver to rotate the screw-like anchor into the drywall until it lies flush with the wall surface. It is important that each anchor be installed flush to the wall surface. Use the supplied screws to secure each bracket to the wall at the anchors. Use (2) anchors and (2) screws for each top bracket, as shown.

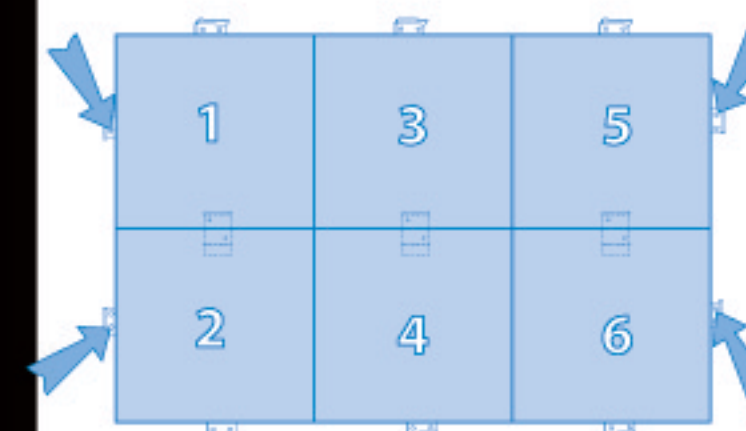
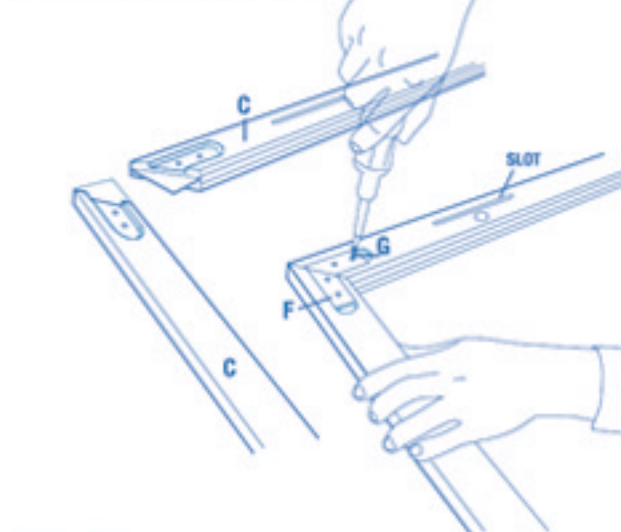
3. Select and hang panels

Select a panel and position a metal bracket onto the magnets of the back of the panel (at positions B, C, and D). Gently pull each bracket outwardly to straighten them. Peel and stick foam pads at each corner, as shown.

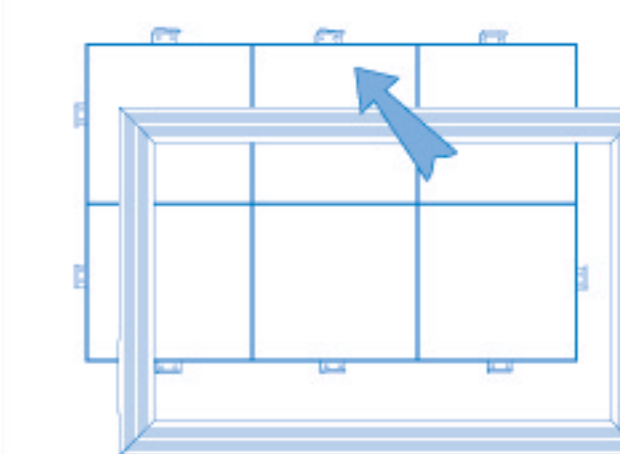
This figure shows how the panels will connect with each other and the order of assembly.

4. Continue adding panels

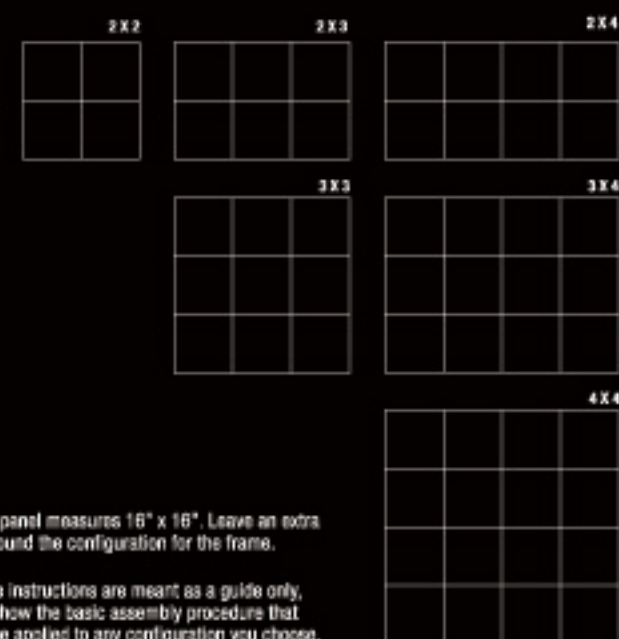
Gently pull down on the lower bracket of the newly hung panel. Mark the wall through the rightside countersunk screw hole of the bracket. Slide the bracket about one inch to the left to expose the mark on the wall. Screw in one anchor at this marked location. Reposition the bracket so that the right screw hole of the bracket aligns with the newly installed anchor and use one screw to secure the bracket to the anchor.

**5. Assemble frame**

FRAME ASSEMBLY
a) Join the two frame pieces together
b) Position the L-bracket over the corner of the connected frame rails
c) Secure the L-bracket to the frame rails using the provided screws



Position the assembled frame around the wall-mounted panel. Adjust the frame until the magnets engage ("click") against the wall-mounted brackets. Note: each flange of each bracket (shown in the figure of step 3) should fit within an adjacent slot (shown in the figure of step 4) of the frame pieces.
And if you need additional instruction, check out pbteen.com.

STYLE-TILE SYSTEM WITH FRAME

Each panel measures 16" x 16". Leave an extra 2" around the configuration for the frame.

These instructions are meant as a guide only,
and show the basic assembly procedure that
can be applied to any configuration you choose.