


Beadboard Desk with Corner Top

Pre-assembly:

- Please read all instructions before beginning assembly.
- Two-person assembly is recommended.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.

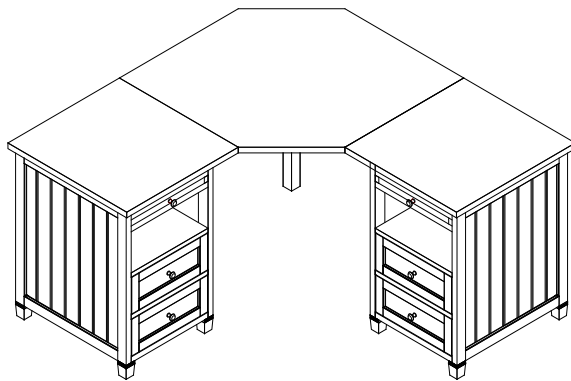


Hardware Included:


A - (4) Wooden knob bolts
(5/32" x 28)




B - (4) Wooden knobs

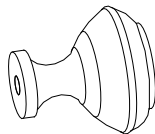


C - (1) Wooden knob with
hardware attached

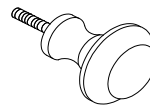


D - (4) Long bolts
(1/4" x 2-1/2" x 12)

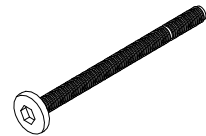


E- (8) Spring washer
(1/4" x 11 x 2mm)

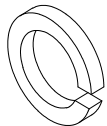

F - (8) Flat washers
(1/4" x 16 x 2)

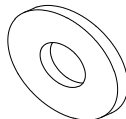

G - (8) Semi-circle brackets
(5/16" x 31 x 8)

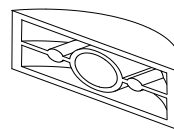


H - (8) Nuts
(1/4" x 10 x 5mm)



I - (1) Allen Key (4mm x 74 x 29)




J - (1) Wrench (10 x 89 x 1.5mm)

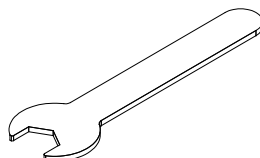


Parts Included:


K – (2) Desk Pedestal

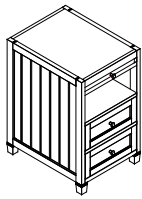


L – (1) Desk Top (center part)

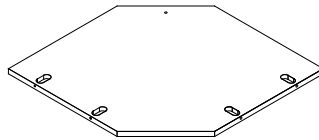

M – (2) Desk Top (side parts)

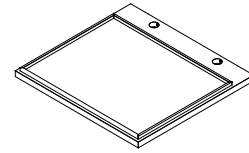

N – (1) Supporting leg

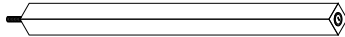


Tools Required:


(1) Phillip Screwdriver (not included)

Assembly:


1. Gently screw the Wooden Knob with hardware attached (C) into movable board.
2. Attach Wooden knobs (B) to drawers by holding Wooden Knobs (B) over pre-drilled hole in drawer front. Screw Wooden Knob Bolt (A) through the rear of the drawer so that it enters the Wooden knob (B), using Phillips screwdriver, as shown. Adjust recessed levelers on the bottom of the pedestal's feet, if needed. Repeat the same steps for the other pedestal.

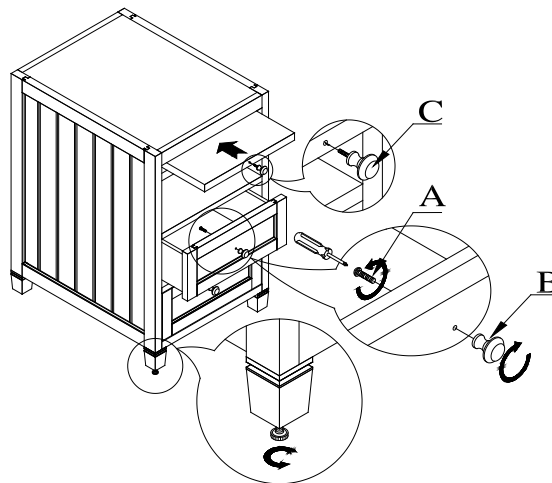

3. Carefully lay the Desk Top Center Part (L) and Desk Top Side Parts (M) upside down on a carpet or scratch-free surface.
4. Slide a Spring Washer (E), a Flat Washer (F), followed by a Semi-Circle Bracket (G) onto a Long Bolt (D). Insert the Long Bolt (D) through the pre-drilled holes on the underside of the Desk Top Center Part (L), as shown in the illustration below.
5. As the bolt exits the connection hole on the Desk Top Center Part (L) and enters the corresponding connection hole on the Desk Top Side Part (M), add another Semi-Circle Bracket (G), Flat Washer (F), Spring Washer (E), and a Nut (H). Tighten Nuts (H) by using enclosed Wrench (J).
6. Repeat for all pre-drilled holes on the underside of the Desk Top Center Part (L) and periodically tighten all connections.
7. Insert the Supporting Leg (N) into the pre-drilled hole in the back corner of the Desk Top Center Part (L). Turn it clockwise until adequately secured.

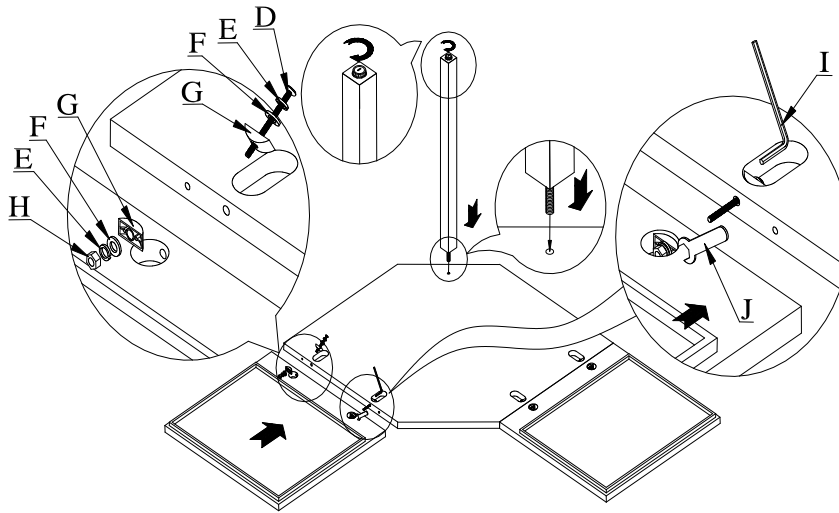

8. Put the Pedestals (K) in the position as shown. Two people turn the connected top right side up and lift to the desired height. Make sure the two Pedestals (K) align with the positioning frames underneath the top and slowly lower the top down until it sits firmly on the Pedestals (K). Adjust the recessed levelers underneath the Supporting Leg (N) and Pedestal legs to make sure the whole assembly is balanced.

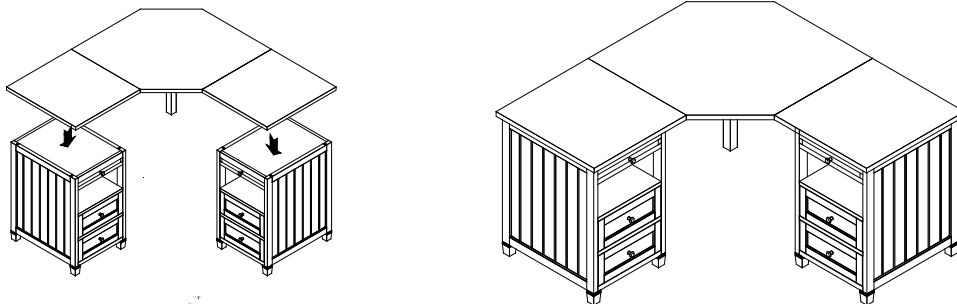

Care Instructions:

- Avoid direct sunlight and excessive temperatures.
- Dust often using a clean, soft, dry and lint-free cloth.
- Slightly moisten cloth with water. A damp cloth holds dust and prevents scratching.
- Waxing is not recommended on lacquered finish.