


Cushy Armless Chair

PRE-ASSEMBLY:

- Please read all instructions before beginning assembly.
- Two person assembly is recommended.

PARTS INCLUDED:

A- Back Cushion (1pc)




B- Seat Cushion (1pc)



ASSEMBLY:

- 1. Carefully install Back Cushion (A) onto Seat Cushion (B) by inserting the rods of the Back Cushion (A) into the tubes of the Seat Cushion (B), as shown.
- 2. Make sure connection is secure.

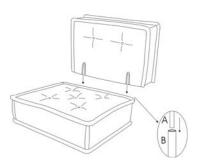

- Wipe with a soft, dry cloth.
- Avoid the use of all household cleaners and abrasives.



Cushy Corner Chair

PRE-ASSEMBLY:

- Please read all instructions before beginning assembly.
- Two person assembly is recommended.

PARTS INCLUDED:

A- Side Cushion (1pc)



B- Back Cushion (1PC)




C- Seat Cushion (1pc)



ASSEMBLY:

- 3. Carefully install Side Cushion (A) onto Seat Cushion (C) by inserting the rods of the Side Cushion (A) into the tubes of the Seat Cushion (C), as shown.
- 4. Carefully install Back Cushion (B) onto Seat Cushion (C) by inserting the rods of the Back Cushion (B) into the tubes of the Seat Cushion (C), as shown.
- 5. Make sure connection is secure.

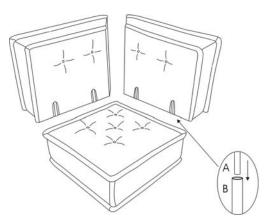

- Wipe with a soft, dry cloth.
- Avoid the use of all household cleaners and abrasives.




Cushy Pedestal Base

PRE-ASSEMBLY:

- Please read all instructions before beginning assembly.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.


PARTS & HARDWARE INCLUDED:

A	В	С	D	E	F
Wood Slat (With Leg)	Wood Slat (Without Leg)	Bolt Ø6 X 51mm	Lock Washer Ø10mm	Flat Washer Ø10mm	Wood Dowel Ø8 X 30mm
2 PCS	2 PCS	8 PCS	8 PCS	8 PCS	8 PCS




ASSEMBLY:

1. Assemble a bolt and washers set by threading a Lock Washer (D) and Flat Washer (E) onto a Bolt (C). Make 8 sets.

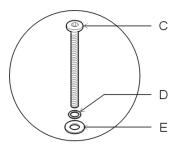


Bolt and Washers Set

2. Place the parts upside down on a soft clean surface, as shown below. Assemble the Wood Slat with Legs (A) and Wood Slats without Legs (B), as shown in the illustration using Wooden Dowels (F). Insert the Wooden Dowels (F) into the pre-drilled holes located at the ends of the Wood Slats without Legs (B) and into the pre-drilled holes on the Wooden Slat with Legs (A), as shown below. The Wooden Dowels (F) will help guide the bolt and washer sets previously assembled. Secure the assembly with the 8 bolt and washers sets previously assembled in Step 1. Each bolt and washers set goes through the inner side of a leg on the Wood Slats with Legs (A) and into the threaded hole located in the Wood Slat without Legs (B). Loosely tighten using the Allen Key (G) until all washer sets are in place. Then fully tighten. See the illustrations below.

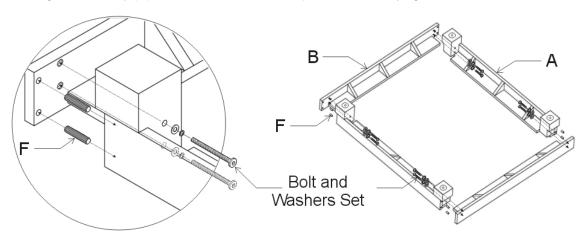

3. Place the assembled Cushy Pedestal Base in an upright position. Adjust the adjustable levelers on the bottom of the feet, as needed. See illustration.

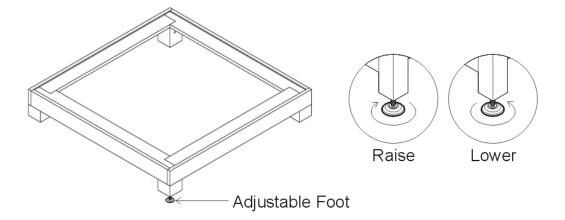

- Clean with a soft, dry cloth.
- To protect the finish, do not apply household cleaners or abrasives.




Cushy Turned Wood Base

PRE-ASSEMBLY:

- Please read all instructions before beginning assembly.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.


PARTS & HARDWARE INCLUDED:

	Α	В	С	D	E	F
	Wood Slat (With Block)	Wood Slat (Without Block)	Turned Leg	Allen Bolt	Lock Washer	Flat Washer
			0	(a) Design of the second secon		0
ı	2 PCS	2 PCS	4 PCS	8 PCS	8 PCS	8 PCS

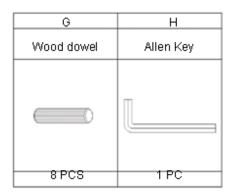


ASSEMBLY:


1. Assemble a bolt and washers set by threading a Lock Washer (E) and Flat Washer (F) onto an Allen Bolt (D). Make 8 sets.

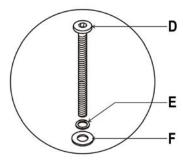


2. Place the parts upside down on a soft clean surface, as shown below. Assemble the Wood Slat with Block (A) and Wood Slat without Block (B) as shown in the illustration using the Wood Dowels (G). Insert the Wood Dowels (G) into the pre-drilled holes located in the ends of the Wood Slat without Block (B) and into the pre-drilled holes of the Wood Slat with Block (A), as shown below. The Wooden Dowels (G) will help guide the bolt and washer sets previously assembled. Secure the assembly with the 8 Bolt and Washers Sets previously assembled in Step 1. Each Bolt and Washers Set goes through the inner side of the block on the Wood Slat with Block (A) and into the threaded hole located in the Wood Slat without Block (B). Loosely tighten using the Allen Key (H) until all washer sets are in place. Once all washer sets are in place, fully tighten. See the illustration below.

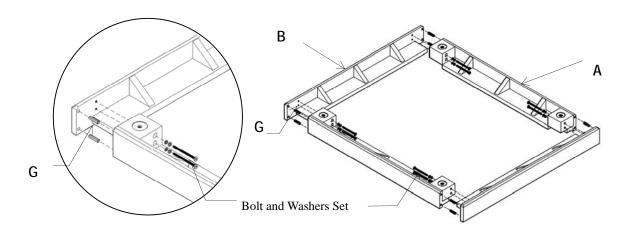

3. Insert the pre-attached screw of the Turned Leg (C) into the pre-installed insert nut located in the bottom of the blocks. Turn clockwise to fully tighten. **See illustration below.**

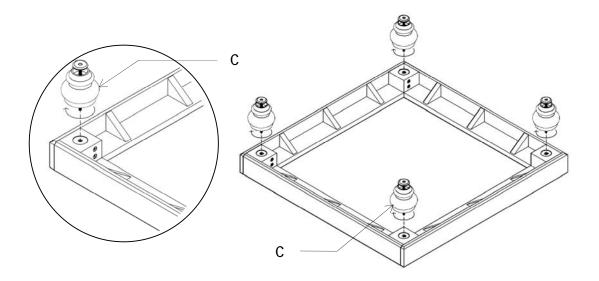

4. Place the assembled Cushy Turned Wood Base in an upright position. Adjust the adjustable levelers on the bottom of the Turned Legs (C), as needed so the piece sits evenly on the floor. **See illustrations below.**

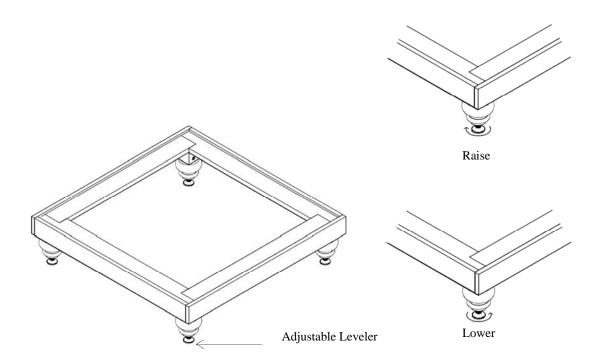

- Clean with a soft, dry cloth.
- To protect the finish, do not apply household cleaners or abrasives.



Cushy Storage Base

PRE-ASSEMBLY:

- Please read all instructions before beginning assembly.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.


PARTS & HARDWARE INCLUDED:

A	В	С	D	Е	F
Top Panel	Bottom Panel	Divider Panel	Support	Allen Bolt	Lock Washer
					0
1 PC	1 PC	2 PCS	4 PCS	8 PCS	8 PCS


G	Н		J
Flat Washer	Screw	Wood Dowel	Allen Key
0			
8 PCS	16 PCS	16 PCS	1 PC

ASSEMBLY:


1. Assemble a bolt and washers set by threading a Lock Washer (F) and Flat Washer (G) onto a Bolt (E). Make 8 sets.

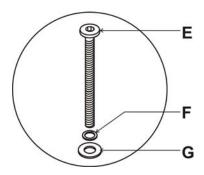


- 2. Place the parts on a soft clean surface. First, assemble the two Divider Panels (C) by placing them crossways, as shown in Figure 1. Insert the Wood Dowels (I) into all the 8 pre-drilled holes located on each of the corners and in the middle area of the Bottom Panel (B), as shown in Figure 2.
- 3. Attach the 4 Supports (D) and the Divider Panels (C) onto the Bottom Panel (B) by placing the pre-drilled holes of the Supports (D) and the Divider Panels (C) onto the previously inserted Wood Dowels (I), as shown in the illustrations below
- 4. Insert the remaining 8 Wood Dowels (I) into the pre-drilled holes located on the top side of the Supports (D) and Divider Panels (C), as shown below.

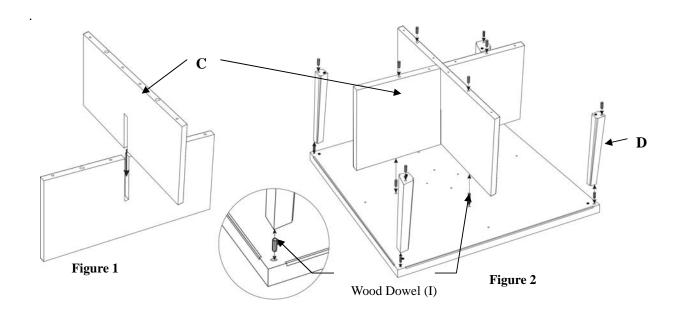

5. Turn the assembly on its side on a soft clean surface. Secure the Supports (D) to the Bottom Panel (B) with 4 bolt and washers sets. Insert the bolt and washer sets through the underside of the corners of the Bottom Panel (B) and into the threaded holes located in the Supports (D). Tighten with Allen Key (J). Secure the Divider Panels (C) to the Bottom Panel (B) by driving the 8 Screws (H) through the pre-drilled hole on the underside of the Bottom Panel (B) and into the pre-drilled holes of the Divided Panels (C). Tighten using a Phillips Head Screwdriver. See illustrations below.

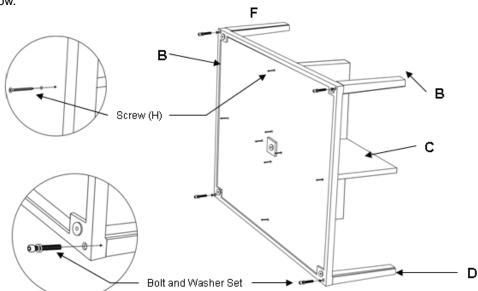

6. Turn the assembly in an upright position. Using the Wood Dowels (I) inserted in the top of the Divider Panels (C) and Supports (D) as guides, place the Top Panel (A) on top of the Supports (D), and Divider Panels (C). Secure the Top Panel (A) with the remaining 4 bolt and washers sets. Insert the bolt and washers set through the pre-drilled holes located in the corner of the Top Panel (A), and into the threaded holes located in the Supports (D). Tighten using the Allen Key (J). Then, using a Phillip Head Screwdriver drive 8 Screws (H) through the pre-drilled holes located on the Top Panel (A) and into the Divided Panels (C). See illustrations below.

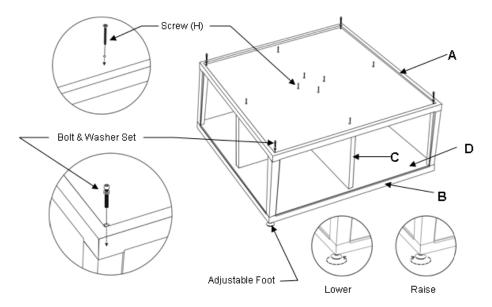

7. Adjust the adjustable levelers on the bottom of the feet by loosening or tightening them, as needed, so it sits evenly on the floor. See above illustrations.

- Clean with a soft, dry cloth.
- To protect the finish, do not apply household cleaners or abrasives.