




Ultimate Bed

Pre-Assembly:

Remove all parts and hardware from the box and lay out on a clear carpeted or scratch-free work surface. (the shipping box provides an ideal work surface), this will avoid damaging any parts during assembly. Do not dispose of any contents until assembly is completed to avoid accidentally discarding small parts or hardware. Use the parts and hardware lists above to identify and separate each of the pieces included. Two adult assembly is recommended. The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions. If using power tools to aid in assembly please use caution. Power tools can damage hardware or split wood.


Parts Included:

- A - Headboard –1pc
- B1 - Headboard Rail – 1 pc
- B2 - Footboard Rail – 1 pc
- C - Siderails - 2 pcs
- D1 - Base Panel - 1 pc
- D2 - Base Panel - 1 pc
- D3 - Base Panel - 1 pc
- E – Shelf Cabinet - 1 pc
- F – 2 Drawer Cabinet – 1 pc
- G - 2 Door Cabinet – 1 pc
- H - Center Support Legs – 3 pcs
- I - Center Support Rail –1 pc

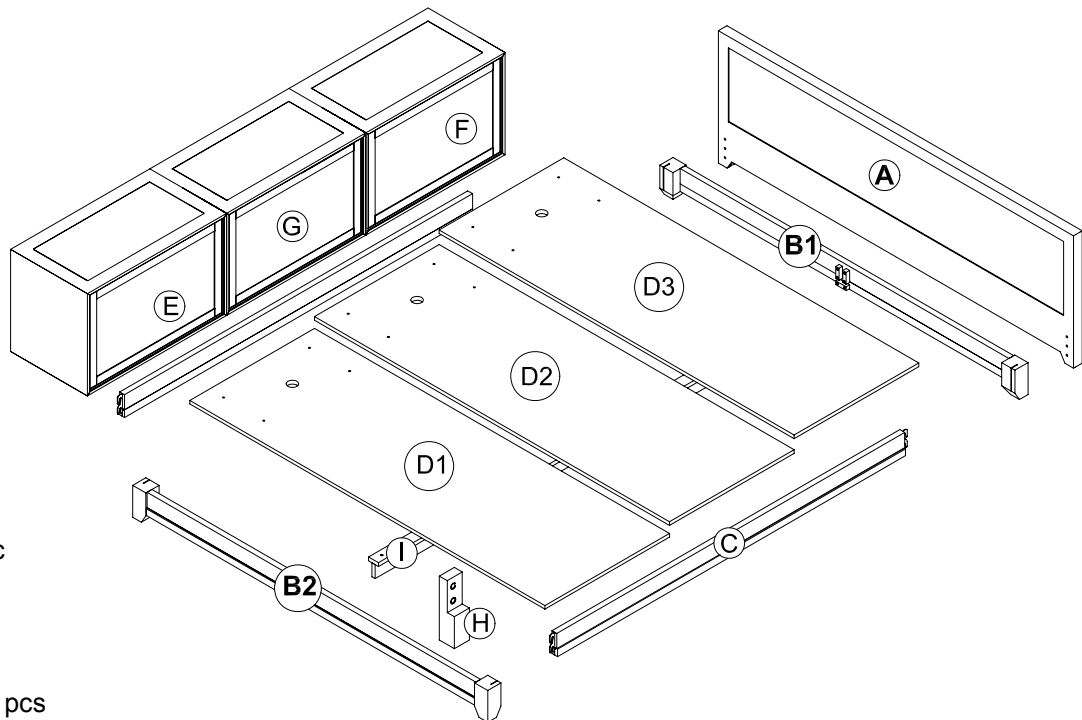


Hardware Included:

- J - Wood Plugs -6pcs

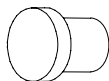


- K - Allen Bolts (1/4" x 2-1/2") -6pcs

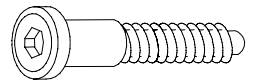


- L -Allen Key (4 mm) -1pc




- M – Phillips Head Screw (3/16" x 1-1/4") - 4pcs

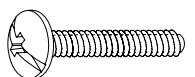

- N -Knob - 4 pcs

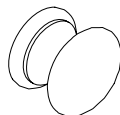

- O - Allen Bolts (1/4" x 1") –18pcs

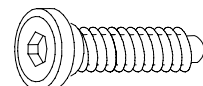

- P – Metal Dowel – 6pcs




Tools Required but not included:


Phillips Head Screwdriver

Assembly Instructions:

1. Attach the Siderails (C) to the Headboard Rail (B1) and Footboard Rail (B2) by inserting the hooked ends of the Siderails (C) into the slots of the Headboard and Footboard Rails (B1 and B2) and applying downward pressure until the Siderails (C) fit tightly into place. (Fig.1). The Headboard Rail (B1) has pre-drilled holes on its legs for attaching the Headboard (A).

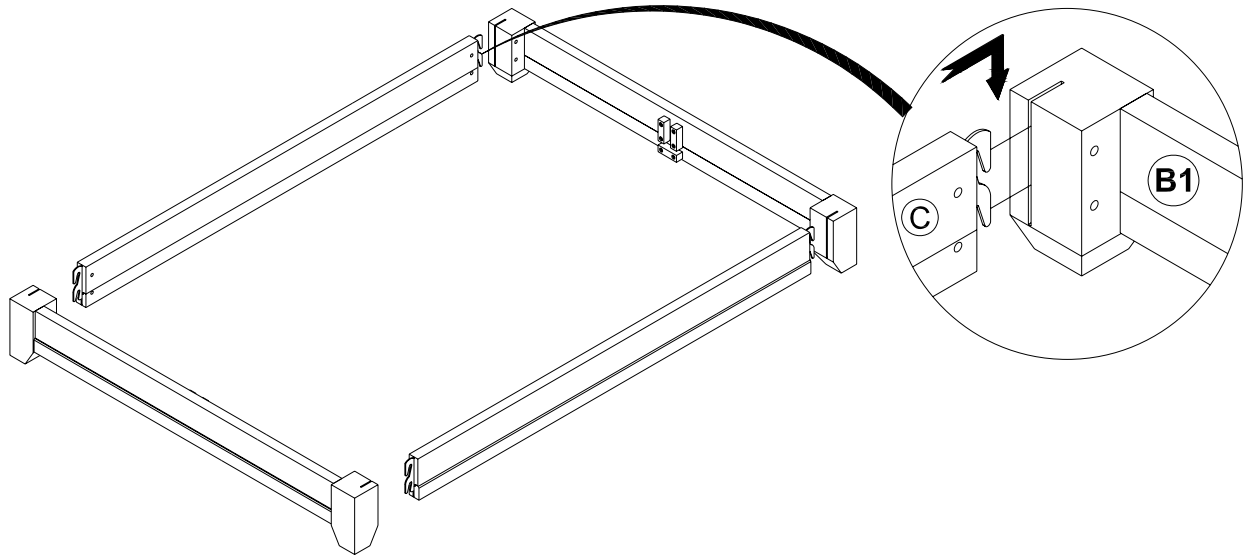
Fig.1

2. Position the Headboard (A) and the assembled frame (assembled in step 1) exactly as shown below. Align the pre-drilled holes of the Headboard Rail (B1) on the assembled frame with the pre-drilled holes of the Headboard (A). Insert Allen Bolts (K) through the pre-drilled holes of the Headboard (A) and into the pre-drilled holes of the Headboard Rail (B1) on the assembled frame. Tighten with the Allen Key (L). Repeat the same process on the other side. (Fig.2). Insert the Wood Plugs (J) to cover the holes, exactly as shown below.

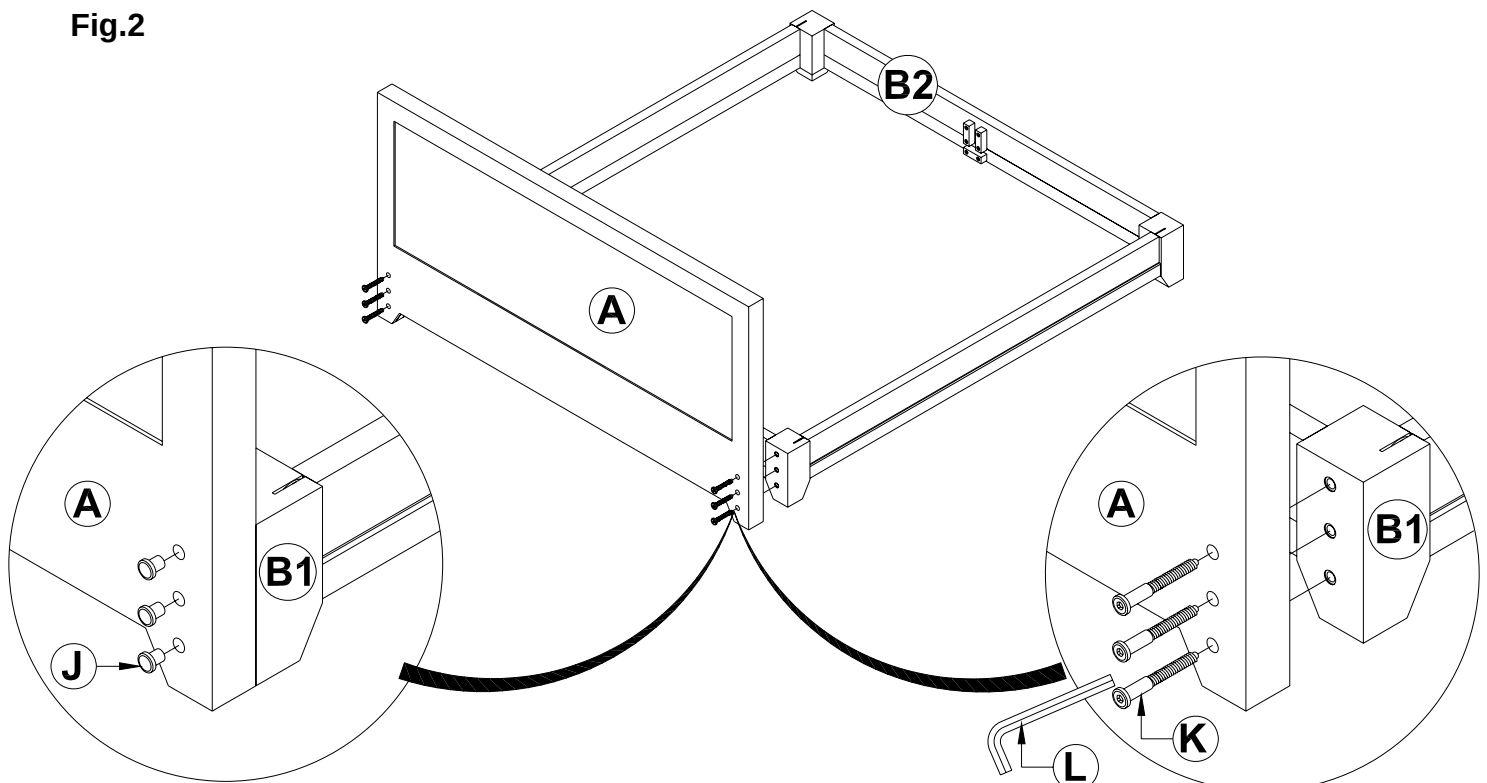Fig.2


3. Position the Center Support Rail (I) and the Center Support Legs (H) exactly as shown below. Align the pre-drilled holes of the Center Support Legs (H) to the pre-drilled holes of the Center Support Rail (I). Insert Allen Bolts (O) through the pre-drilled holes of the Center Support Legs (H) and into the pre-drilled holes of the Center Support Rail (I). Tighten the connections securely with the Allen Key (L). Repeat for all Center Support Legs (H). (Fig.3)

Fig.3

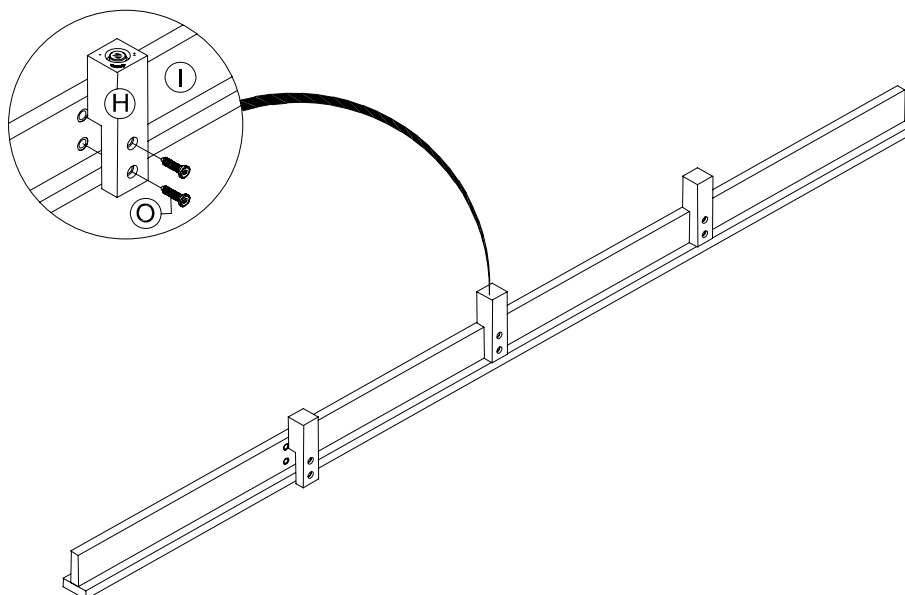


4. Slide the ends of the Center Support Rail (I) onto the brackets found at the center of both the Headboard and Footboard Rails (B1 & B2) exactly as shown below.

Fig. 4

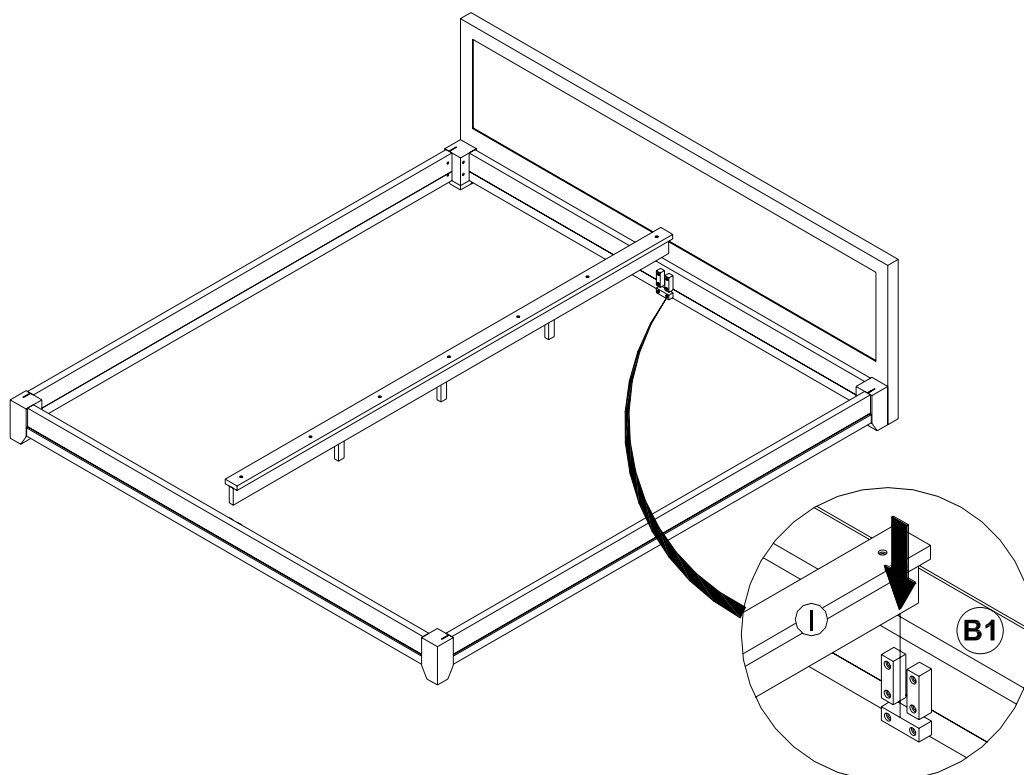

5.Lay the Base Panels (D1, D2 and D3) onto the assembled frame, exactly as shown below. Be sure to align the holes of the Base Panels (D1, D2 and D3), as shown below.


Fig. 5

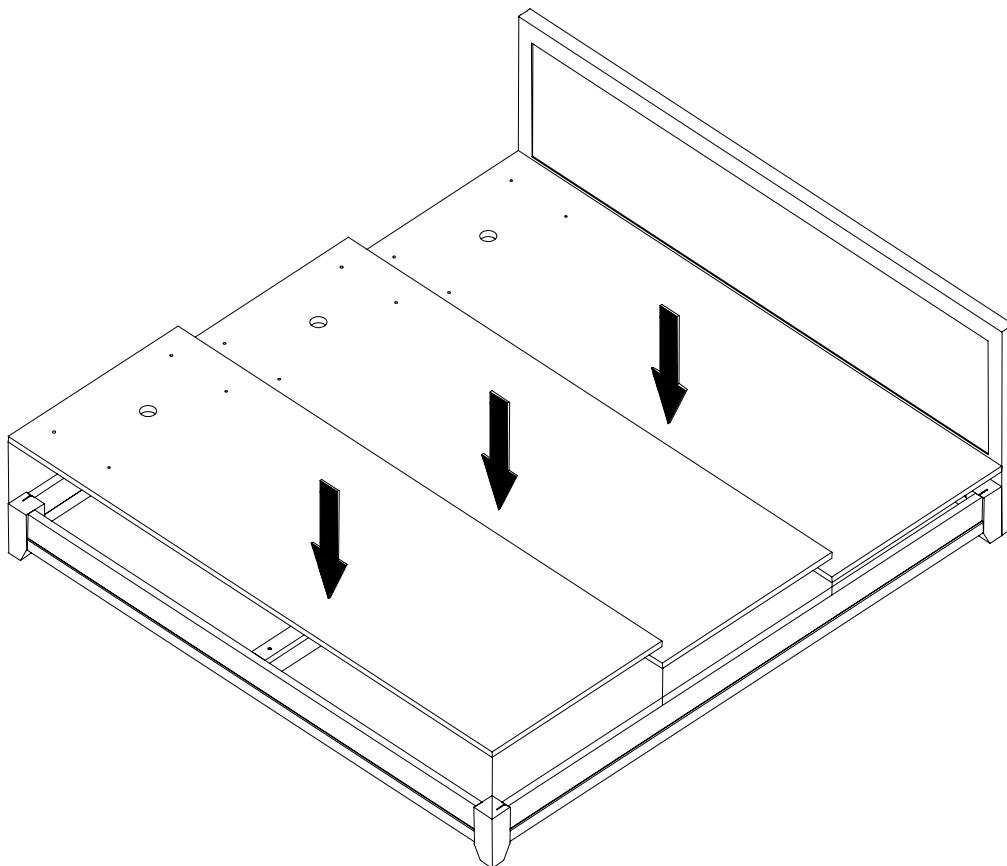

6.Slide the Base Panels (D1, D2 and D3) out exactly as shown below and align the pre-drilled holes of the Shelf Cabinet (E) to the pre-drilled holes of the 1st Base Panel (D1). Insert an Allen Bolt (O) through the underside of the Base Panel (D1) and into the pre-drilled holes on the underside of the Shelf Cabinet (E). Repeat for the other 3 pre-drilled holes. Tighten the connections securely with the Allen Key (L) provided. (Fig.6). Repeat the same process for the 2 Door Cabinet (G) on the 2nd Base Panel (D2) and the 2 Drawer Cabinet (F) for the 3rd Base Panel (D3). Once the Cabinets (E, F & G) are attached, slide the Base Panels back into position.


7.Attach the Knobs (N) to the drawers and doors by placing the Knob (N) in front of the pre-drilled holes on the drawer or door fronts. Insert Screws (M) from inside of the drawer or door and screw into the Knob (N) using a Phillips Head Screwdriver. See Figure 5.

Fig. 6

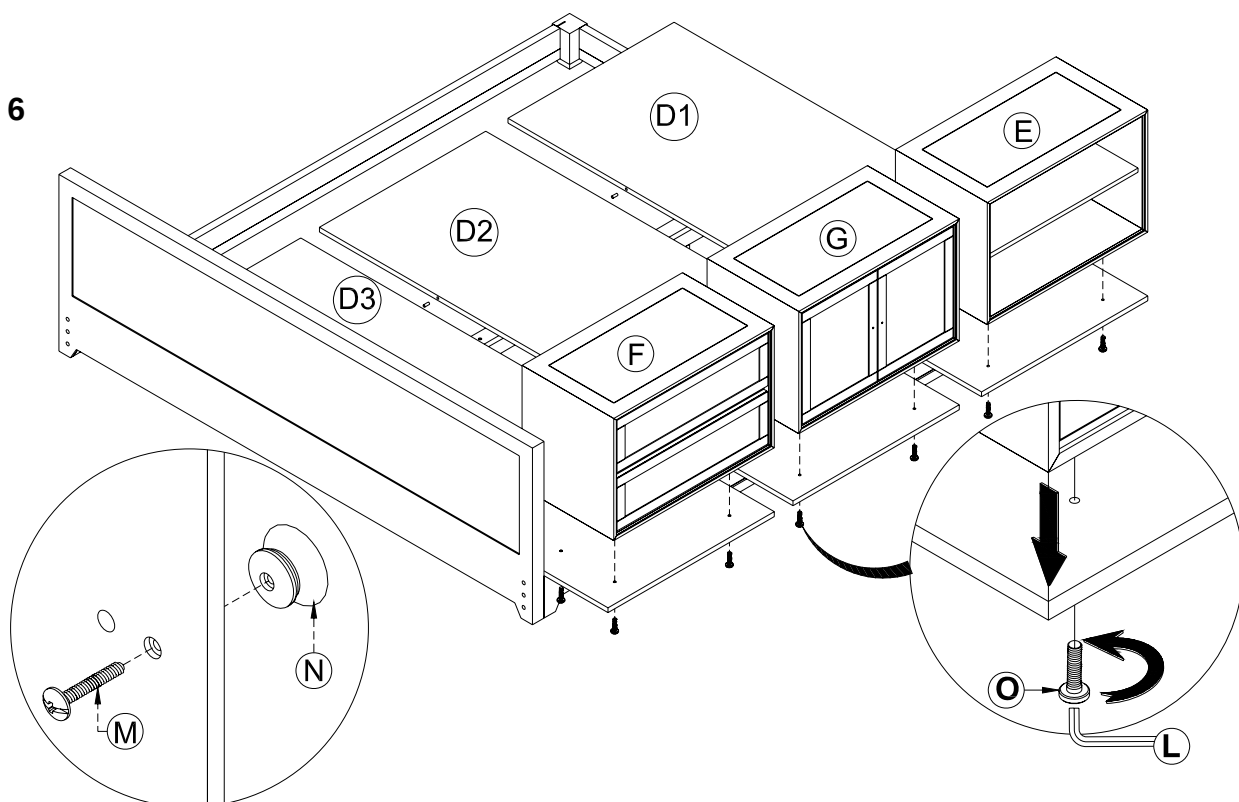

8. Position the Base Panels (D1, D2 and D3) as shown and align each pre-drilled hole, located at the edges of the Base Panels (D1, D2 and D3). Insert the Metal Dowel (P) into the pre-drilled holes on the edges of the Base Panels (D1, D2 and D3) so that they are connected to one another.

Fig.6

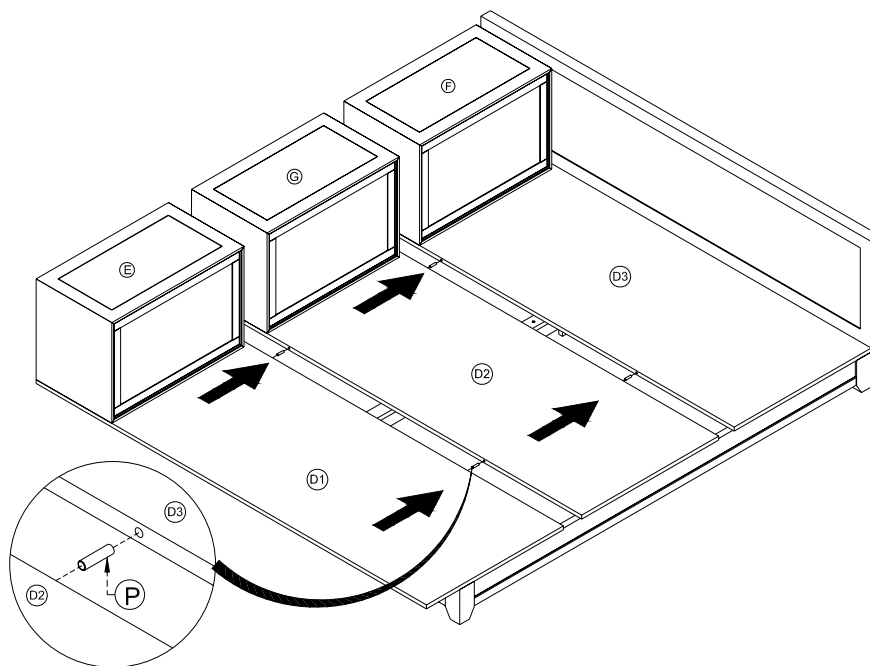

Care Instructions:

- Dust often using a soft, dry cloth.
- Do not use glass cleaner, abrasives, wax or household cleaners on wood.