



Stuff-Your-Stuff Bed (Twin and Full)



Tools Required:

Phillips head screwdriver (not included)

Parts Included:



Carton 1:

- (1) Headboard – AA
- (1) Footboard – BB

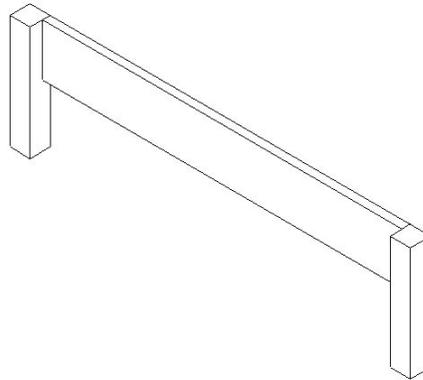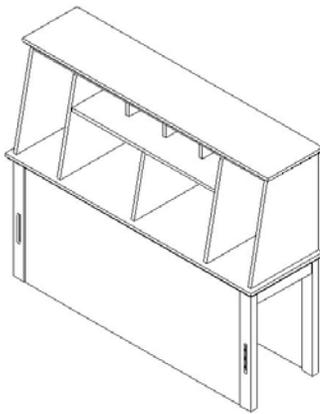

Carton 2:

- (2) Side Rails – CC
- (1) Slat Roll – DD

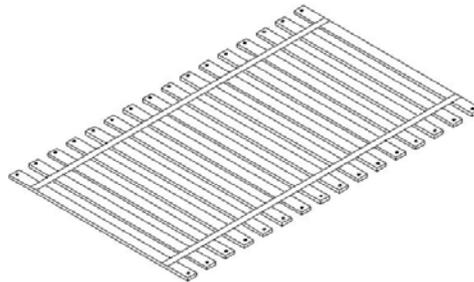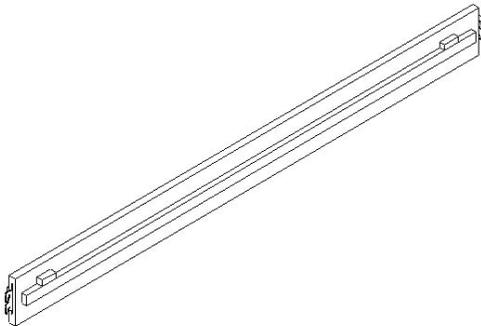


Hardware Included:

- (32) Wood Screws (8 mm x 1") – a 

Assembly Instructions:

1. Attach each side rail (CC) to the headboard (AA) and footboard (BB) by locking the teeth into grooves.
2. Roll out slats (DD) onto rails, positioning the two end slats at the ends of the side rails. Using a Phillips head screwdriver, fasten slats to side rails with screws (a).

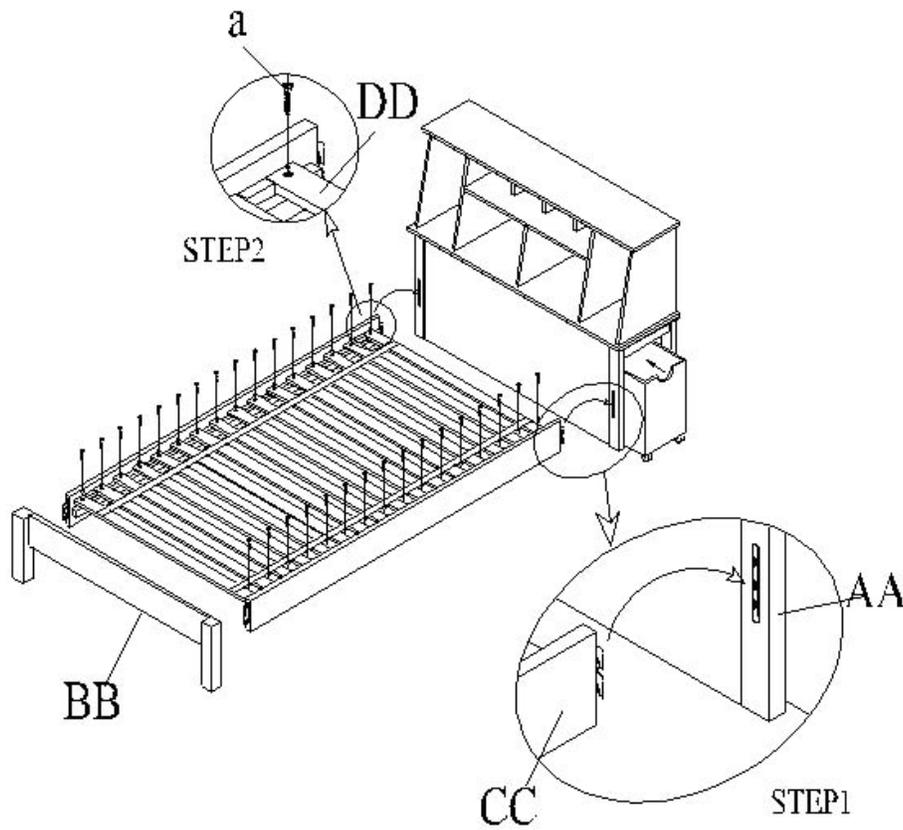

Care Instructions:

- Dust often using a soft, dry cloth.
- To protect the finish, do not apply abrasives or household cleaners.





Stuff-Your-Stuff Suspension Shelf





Pre-Assembly:

- Please read all instructions before beginning assembly.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.

Parts Included:

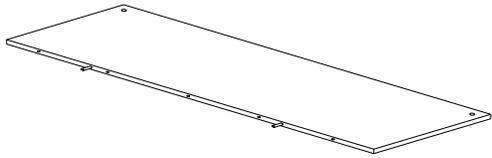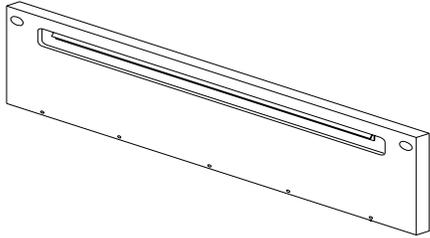A - Bottom Panel – Twin:1pc, Full 2pcs	B - Back Panel – Twin:1pc, Full 2pcs
	

Hardwares Included:

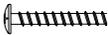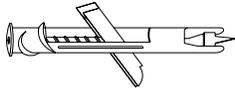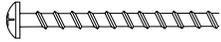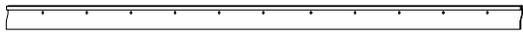C - Screw (4x22mm) – Twin: 6pcs, Full: 10pcs	D - Wire Rod – Twin:2pcs, Full: 4pcs	E - Flat washer (ϕ 6.5) – Twin:4pcs, Full: 8pcs	F - Pan-Head Nut (ϕ 6.0x10mm) – Twin:4pcs, Full 8pcs
			
G - Toggle Anchor – Twin:4pcs, Full: 6pcs	H - Toggle Screw (4x54mm) – Twin: 4pcs, Full: 6pcs	I - Wall Mount Bracket – Twin:1pc, Full: 2pcs	
			


Tools Required:

Phillips Head Screwdriver (not included)


Assembly Instructions:

Exposed
wood dowel


Step 1: Attach the Bottom Panel (A) to Back Panel (B) by aligning the exposed wood dowels on Bottom Panel (A) with pre-drilled holes on front side of Back Panel (B). (Back side of this panel has an affixed product-mounting bracket).
(Fig. 1)

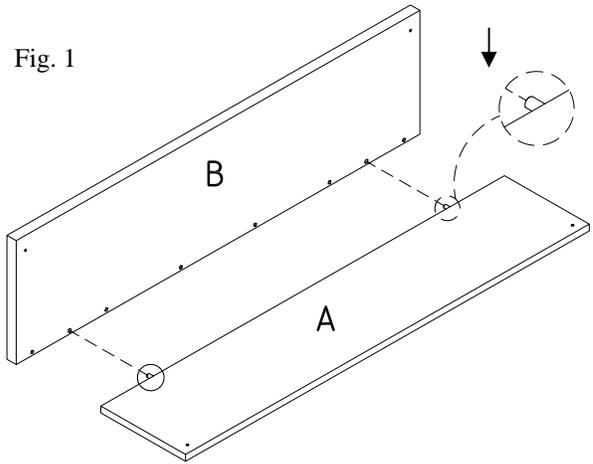

Step 2: Insert the Screws (C) into the pre-drilled holes on Back Panel (B). Use a Phillips Head Screwdriver and turn clockwise, but do not tighten the Screws (C).
(Fig. 2)

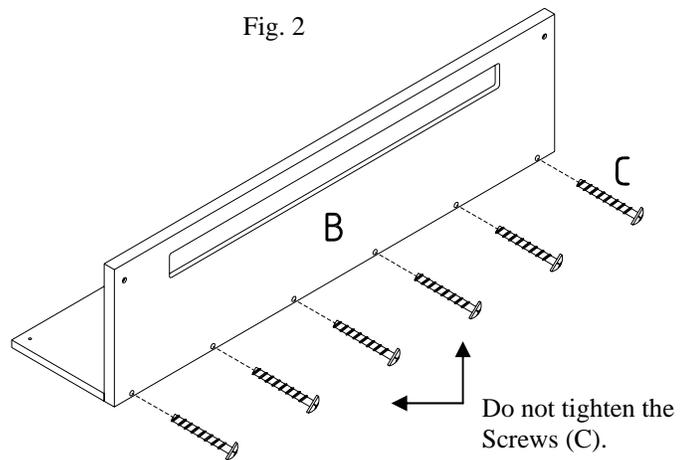

Step 3: Insert the Wire Rods (D) into the pre-drilled holes at the sides of the Bottom Panel (A) and Back Panel (B). **Note:** one threaded end of the Wire Rod is longer than the other end. Insert the long threaded end of the Wire Rod (D) into the pre-drilled hole on Back Panel (B). (Back Panel (B) is thicker than Bottom Panel (A)).
(Fig. 3)

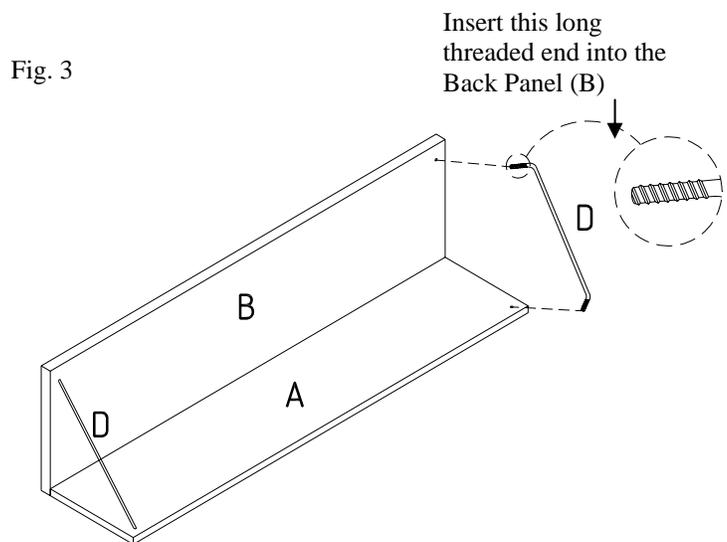


Step 4: Secure the two ends of each Wire Rod (D) with a Flat Washer (E) and a Pan-Head Nut (F) from behind and under of the shelf by using a Phillips Head Screwdriver. Continue tightening all the Screws (C). (Fig. 4)

Note:

Repeat Steps 1 to 4 to assemble another piece using the same

Fig. 4

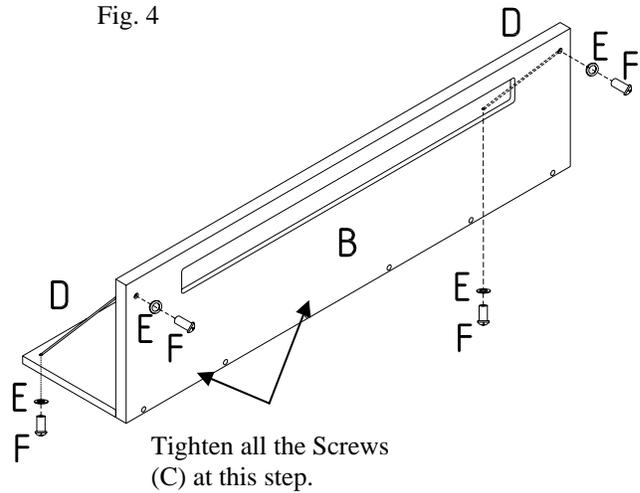

Care Instructions:


- Do not exceed the weight capacity of the shelf. Maximum weight capacity of the shelf is 80 lbs.
- Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tighten if necessary.
- Dust often with a soft, dry cloth.
- To clean, slightly moisten cloth with water (a damp cloth will hold dust and prevent scratching; dry thoroughly).

Simple Mount Hardware Installation:


Note: Toggle anchors and toggle screws are meant for dry wall only.

1. Determine the desired location on the wall for the product. Place the Wall Mount Bracket (I) on the wall. Using the bubble level confirm that the bracket is level. Use a pencil to mark (4) wall mount bracket hole positions at left, center and right on the wall. This is where the toggle anchor hardware will be inserted.
Do not attach Wall Mount Bracket at this stage.

2. Use a Phillips Head Screwdriver to install the Toggle Anchors (G). Do not use a drill to install the toggle anchors and do not force or "pound" the anchor into the wall. The toggle anchor is designed to cleanly cut and bore itself into the wall like a drill bit.
3. Slowly turn the Toggle Anchors (G) clockwise while applying even pressure until the flange just touches the wall. If the anchor position is close to a stud (1/2" or less), keep turning clockwise until one of the arrows on the flange is pointing to the 12 o'clock position.

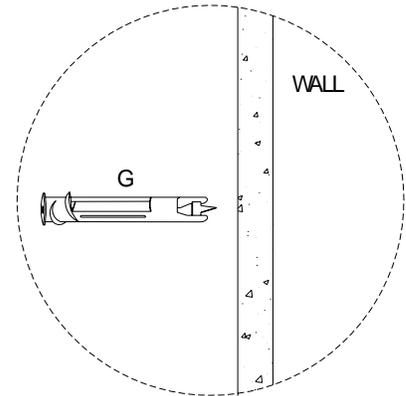


4. Insert the Toggle Screws (H) into the Toggle Anchors (G) and turn clockwise. Here, you will feel a slight resistance. This is the point where the toggle anchor screw is engaging the pivoting portion of the anchor. Continue turning the screw clockwise until the screw head touches the flange. Tighten the toggle anchor screw until it becomes difficult to turn. At this point the internal pivot will have engaged the backside of the dry wall. Remove the toggle Anchor Screw (H), turning counter-clockwise.

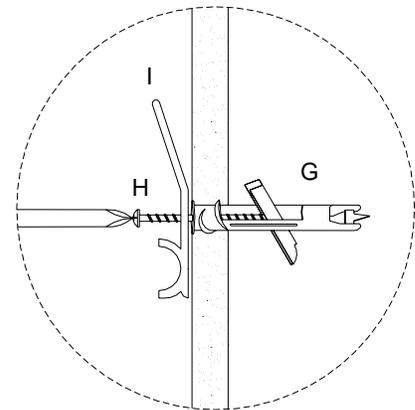

5. Align the Wall Mount Bracket (I) on the wall over the Toggle Anchors (G), and re-insert Toggle Anchor Screws (H) with a Phillips Head Screwdriver until tight.

Hanging the Product:

1. On the back of your product is an affixed product-mounting bracket.
2. Carefully position the product-mounting bracket over the Wall Mount Bracket (I), insuring that the two brackets are aligned.
3. Press down firmly to engage the two brackets.
4. Your product is ready for use.

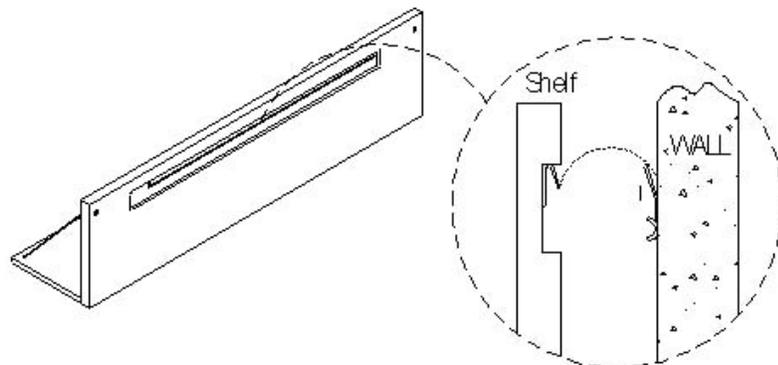



Stuff-Your-Stuff Tower – Top

Parts Included:

All Tower Top parts and hardware are delivered in one carton.

A - Tower Top – 1 pc

B - Large Shelf Panel – 2 pcs

C - Small Shelf Panel – 1 pc

Hardware Included:

D - Wood Screw (M 3.5 x 5/8") – 8 pcs

E - Mending Plate (2-15/16" x 13/16" x 1/16") – 2 pcs

F - Shelf Support Wire (9-5/8" x 11/16" x 1/8") – 6 pcs

Tools Required:

Phillips Head Screwdriver (not included)

Drill needed for Tipping Restraint (not included)

Assembly Instructions:

3. Insert Shelf Support Wires (F) into pre-drilled holes in the middle of both Large Shelf Panels (B).
4. Insert Shelf Support Wires (F) into pre-drilled holes in the underside of the top shelf and on the top of bottom shelf of the Tower Top (A). See Figure 1.
5. Attach both Large Shelf Panels (B) by sliding them onto the Shelf Support Wires (F) on Tower Top (A).
6. Attach Small Shelf Panel (C) by sliding it onto the Large Shelf Panel's (B) Shelf Support Wires (F).
7. Carefully place the Tower Top Unit (A) onto the Tower Base Unit.
8. Secure Tower Top Unit (A) to Tower Base Unit by using Mending Plates (E). Place the Mending Plates (E) over the pre-drilled holes located in the rear of the Tower Top (A) and Tower Base Unit. Secure with Wood Screws (D). See Figure 2

Figure 1


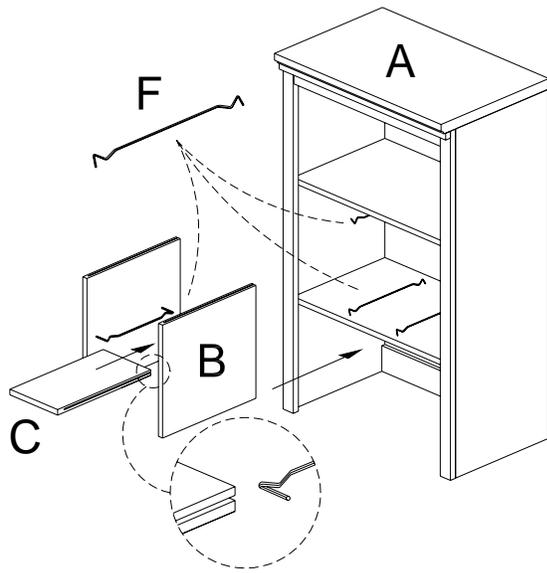


Figure 2

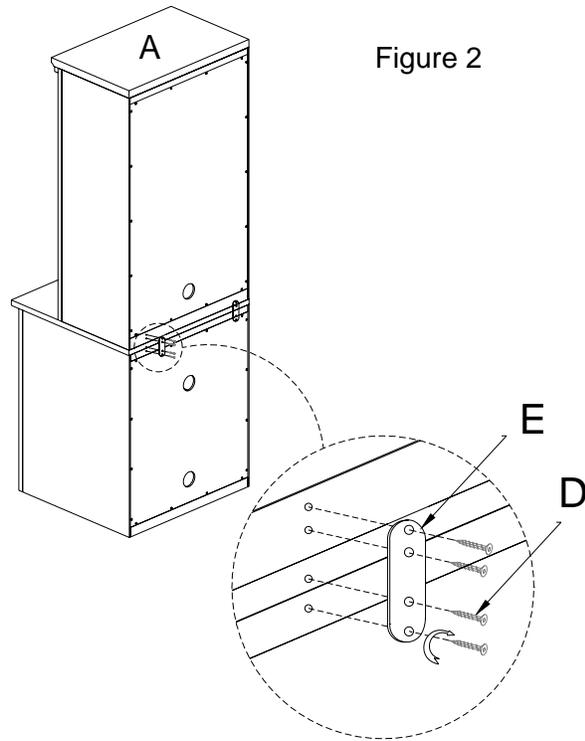

Care Instructions:

Dust often using a soft, dry cloth.

To protect the finish, do not apply abrasives or household cleaners.

Furniture Tipping Restraint



Young children may be injured by tipping furniture. The use of a tipping restraint is highly recommended. When properly installed, this restraint could provide protection against the unexpected tipping of furniture due to small tremors, bumping or climbing. We recommend mounting this restraint to a wall stud.

WARNING: This product is only a deterrent. It is not a substitute for proper adult supervision.

Hardware Included:

A - (2) Brackets

B - (2) Long screws

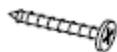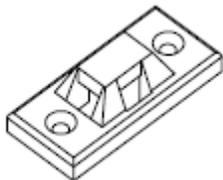

C - (2) Short screws

D - (1) Nylon strap



Installation Instructions:


1. Locate a wall stud behind your furniture. Position a Bracket (A) on the stud approximately 1" below the top of the furniture. Mark and drill pilot hole into the center of the stud with a 3/32" drill bit. Attach a

Bracket (A) to the stud with the Long Screws (B) provided.

2. On the back of the furniture, the second Bracket (A) will need to be attached to the furniture frame at the top. To do this, temporarily move the furniture into its final position and mark the location of the wall's Bracket (A) on the furniture frame with a pencil.

3. Move the furniture away from the wall and place a Bracket (A) on the mark. Using the marks from the previous step as a guide, drill holes for screws with a 3/32" drill bit. Attach the bracket to the furniture with the Short Screws (C) provided.

4. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread the Nylon Strap (D) through the Bracket as shown in the illustration. Tighten strap until snug. Do not overtighten.

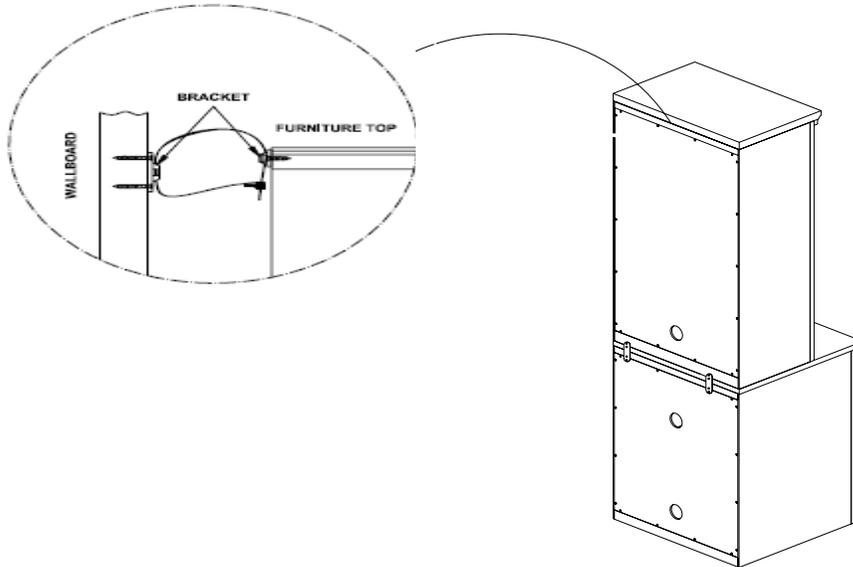



Stuff-Your-Stuff Tower - Base

Parts Included:

All Tower Base parts and hardware are delivered in one carton.

A - Tower Base – 1 pc


B - Shelf – 1 pc

Hardware Included:

C - Shelf Pin – 4 pcs

Assembly Instructions:

9. Insert the 4 Shelf Pins (C) into pre-drilled holes located on the interior walls of the Tower Base (A), at the desired height position.
10. Place Shelf (B) onto the Shelf Pins (C), making sure the Shelf (B) is stable.

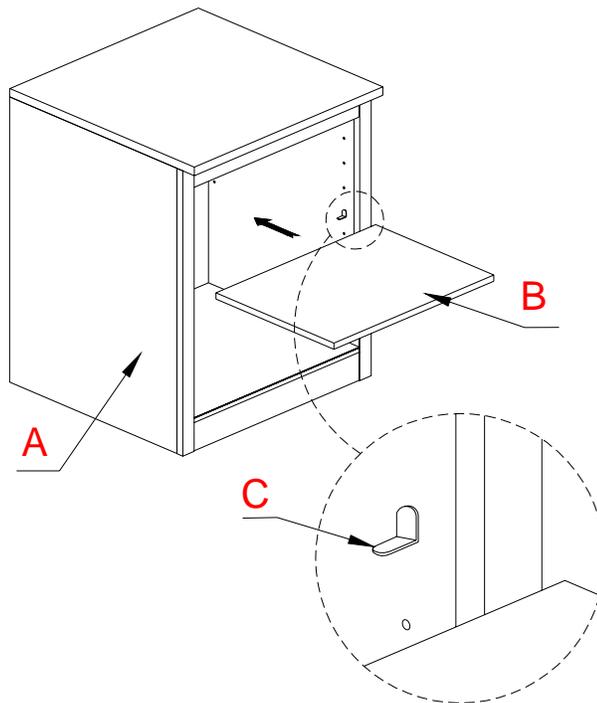

Care Instructions:

Dust often using a soft, dry cloth.

To protect the finish, do not apply abrasives or household cleaners.







Stuff Your Stuff Desk


Pre-Assembly:

- Please read all instructions before beginning assembly.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.

Parts Included:

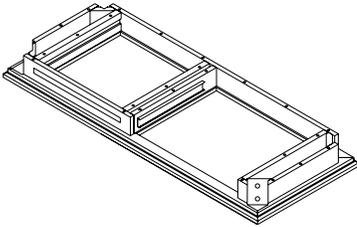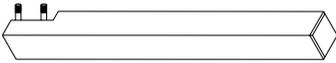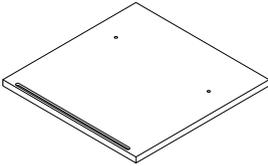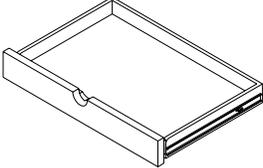A - Desk Top – 1 pc 	B - Leg – 4 pcs 
C - Breadboard – 1 pc 	D - Drawer – 1 pc 

Hardware Included:

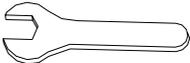E - Flat Washer – 8 pcs 	F - Lock Washer – 8 pcs 	G - Nut – 8 pcs 
H - Allen Wrench – 1 pc 	I - Stopper – 2 pcs 	

Assembly Instructions:

1. Lay the Desk Top (A) upside down on a soft surface or scratch-free surface.
2. Attach the Legs (B) by inserting the exposed threads into the pre-drilled holes on the corner blocks. Secure with Flat Washers (E), Lock Washers (F) and Nuts (G) using Allen Wrench (H). See Figure 1.
3. Insert the Breadboard (C) into the Desk Top (A) with the insert nut on the breadboard facing up, as shown in Figure 1. Insert and tighten Stoppers (I) into the insert nut on the Breadboard.

4. Turn the desk right-side up. Attach the Drawer (D) to the Desk Top (A) by inserting the Drawer's (D) glide, which is pre-mounted on two sides of the Drawer (D), into the runner, which is pre-assembled on the Desk Top (A). Push the Drawer (D) in until the lock stick of the glide on the Drawer (D) stays inside the runner on the Desk Top (A). See Figure 2.

Note: To detach the Drawer (D) from the Desk Top (A). Pull the drawer until it's stopped by the lock stick. Press down on the lock stick on the right side and lift up the left side of the Drawer (D), then pull out to remove it. See figure 2.

Figure 1


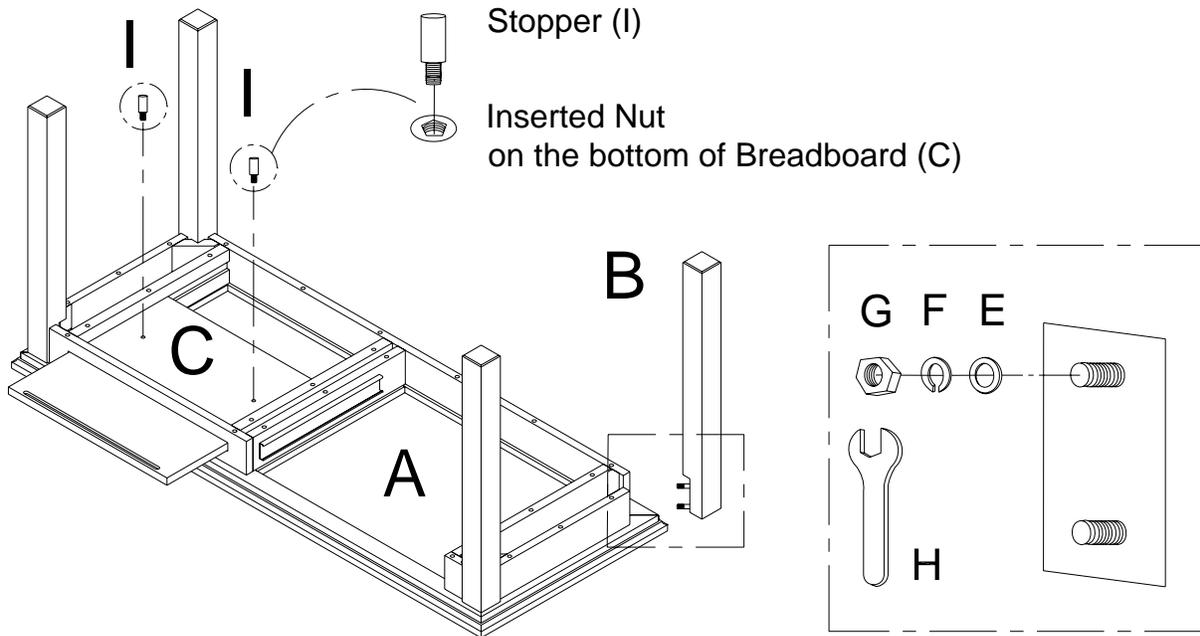


Figure 2

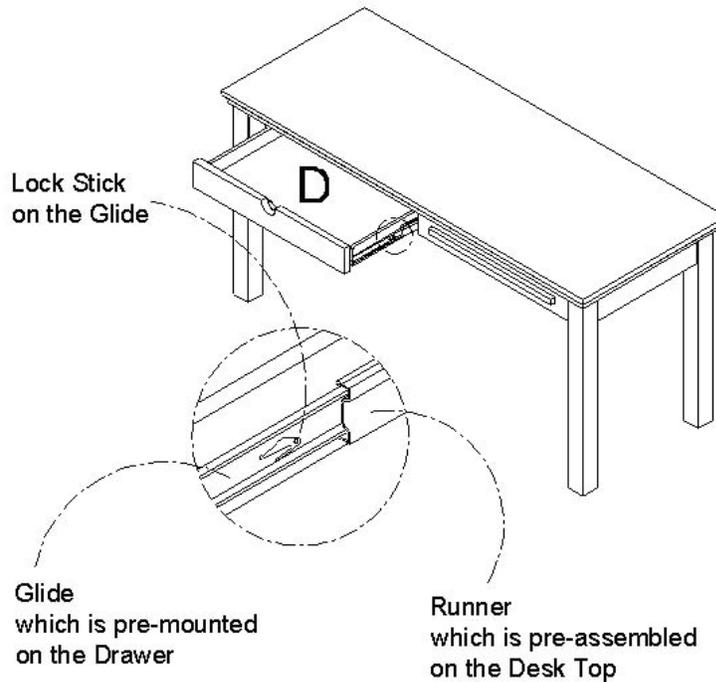

Care Instructions:

- Dust often with a soft, dry cloth.
- To clean, slightly moisten cloth with water (a damp cloth will hold dust and prevent scratching; dry thoroughly)